

# FITTING INSTRUCTIONS

Toyota Hilux Camper Conversion – T4T626



**Max Towing Capacity:** 1500kg

**Towbar Weight:** Approx. 39kg


**Max Ball Weight:** 150kg



**Tools Required:**

M10,12 Spanners/Sockets, Torque Wrench (**Torque M10 to 60Nm, M12 to 100Nm**)

Kit Contents					
Item No.	Description	Qty	Item No.	Description	Qty
1.	D-Shackles & Hitch Cover	1 Set	9.	M10 Flat Washer	4
2.	Towbar Assembly	1	10.	M10 Shakeproof Washer	4
3.	M12 x 1.25 x 35 Bolt	6	11.	Class 4 Pin & Clip	1
4.	M12 Shakeproof Washer	6	12.	Fitting instructions	1
5.	M12 Flat Washer	6	13.	Compliance Label	2
6.	Square Plate with Wire & Nut	2	14.	Tow ball Mount	1
7.	M10 x 1.5 x 30 Bolt	4	15.	TAG Tow ball	1
8.	Dual Hole Plate	2			

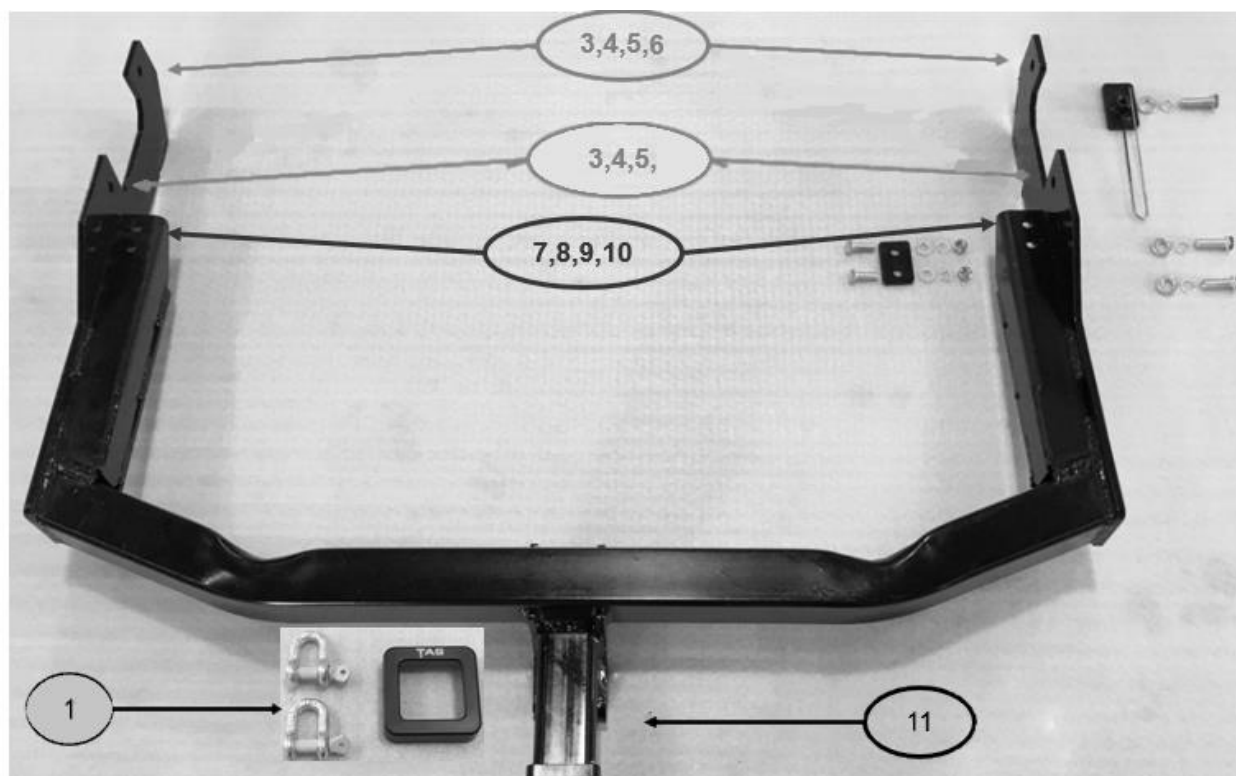

# FITTING INSTRUCTIONS

Toyota Hilux Camper Conversion – T4T626




## Warning:

- This product is for towing purposes only and must only be loaded as shown in your vehicle Owner's Manual.
- This towbar is NOT to be drilled, cut, welded or modified in any way.
- Check behind chassis rail and body panels before drilling to ensure no hazards are present.

## General:

- Before fitting this towbar read fitting instructions and check installation hardware is correct.
- Check that the towbar is suitable for the vehicle and be wary of any changes to the vehicle design that may conflict with the fitting of this towbar.
- After drilling, blow any filings clear, remove any swarf and treat exposed metal with a rust inhibitor.
- If this vehicle requires a bumper cut out, please check to make sure that you measure twice and check twice before cutting any panels as some bumper profiles can change. If you are not sure, then please ask your towbar supplier.

Step 1    Attach Towbar End Plates		
Instructions	Tools	Fasteners/Torques
Loosely secure towbar to the chassis with the help of a lifting apparatus. <ul style="list-style-type: none"><li>- Using 2x M12x35 Bolts, Flat and Shake Proof Washers in the rearward 2 holes on outside of each chassis rail.</li><li>- Using 1x M12x35 Bolt, Flat and Shake Proof Washers into the M12 Nut Plate on Wire, through the hole towards the front of the vehicle in each chassis rail (bend wire and tuck into chassis rail)</li><li>- Using 2 x M10 Bolt, Flat and Shake Proof Washer and the Dual Hole Top Plate through the mounting point on the bottom of each chassis rail.</li></ul>	-M10, M12 Spanners and Sockets	N/A
Step 2    Apply Sticker to Door Jam		
		
Instructions	Tools	Fasteners/Torques
Apply Towbar info label to the inside of the driver's side door Jam.	N/A	N/A

# FITTING INSTRUCTIONS

Toyota Hilux Camper Conversion – T4T626



## WARRANTY STATEMENT

The manufacturer of TAG branded products, warrants your TAG Towbar for its full product life under the following conditions:

- You can show proof of purchase.
- The towbar has been correctly installed by a suitably qualified installer.
- The towbar has not been modified or abused in any way and has only been used for the purpose intended.
- The towbar was not fitted second hand to your vehicle.

The extent of this warranty includes materials and workmanship used in the manufacture of the towbar and is to the equivalent value of current, full replacement cost.

Nothing stated or implied in this warranty limits in any way, the statutory rights that you may have.

To make a claim visit the original installer in the first instance or, if you are unable to or are not satisfied with their help, then contact us direct by phone on 07 3208 3022 or via email [qldsales@arandatowbars.com.au](mailto:qldsales@arandatowbars.com.au)