




ERICH JAEGER





Installation instructions

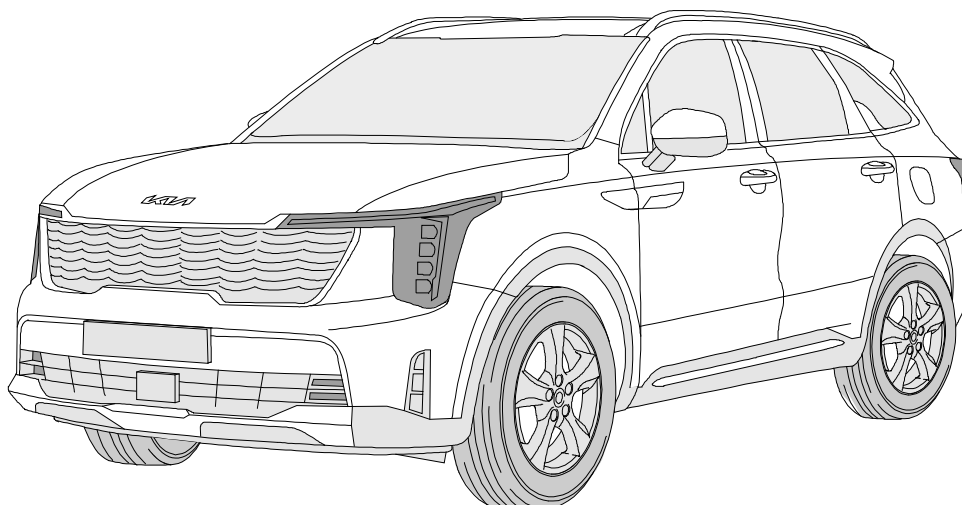

750167EJ

KIA SORENTO

03/24 >>

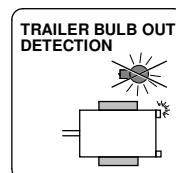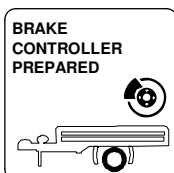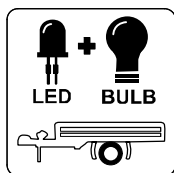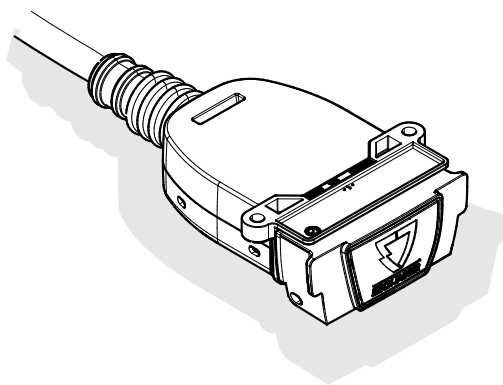

Reference:

The following information must be reviewed before beginning the assembly:

The installation instructions are to be thoroughly read.


The installation should be carried out by qualified personnel with the relevant technical knowledge.

The vehicle manufacturers' current technical notices and information on retrofitting must be followed.


The removal and replacement instructions found in the current repair manuals must be followed.

It must be ensured that the vehicle is technically suitable for the installation of a trailer hitch.

OVERVIEW

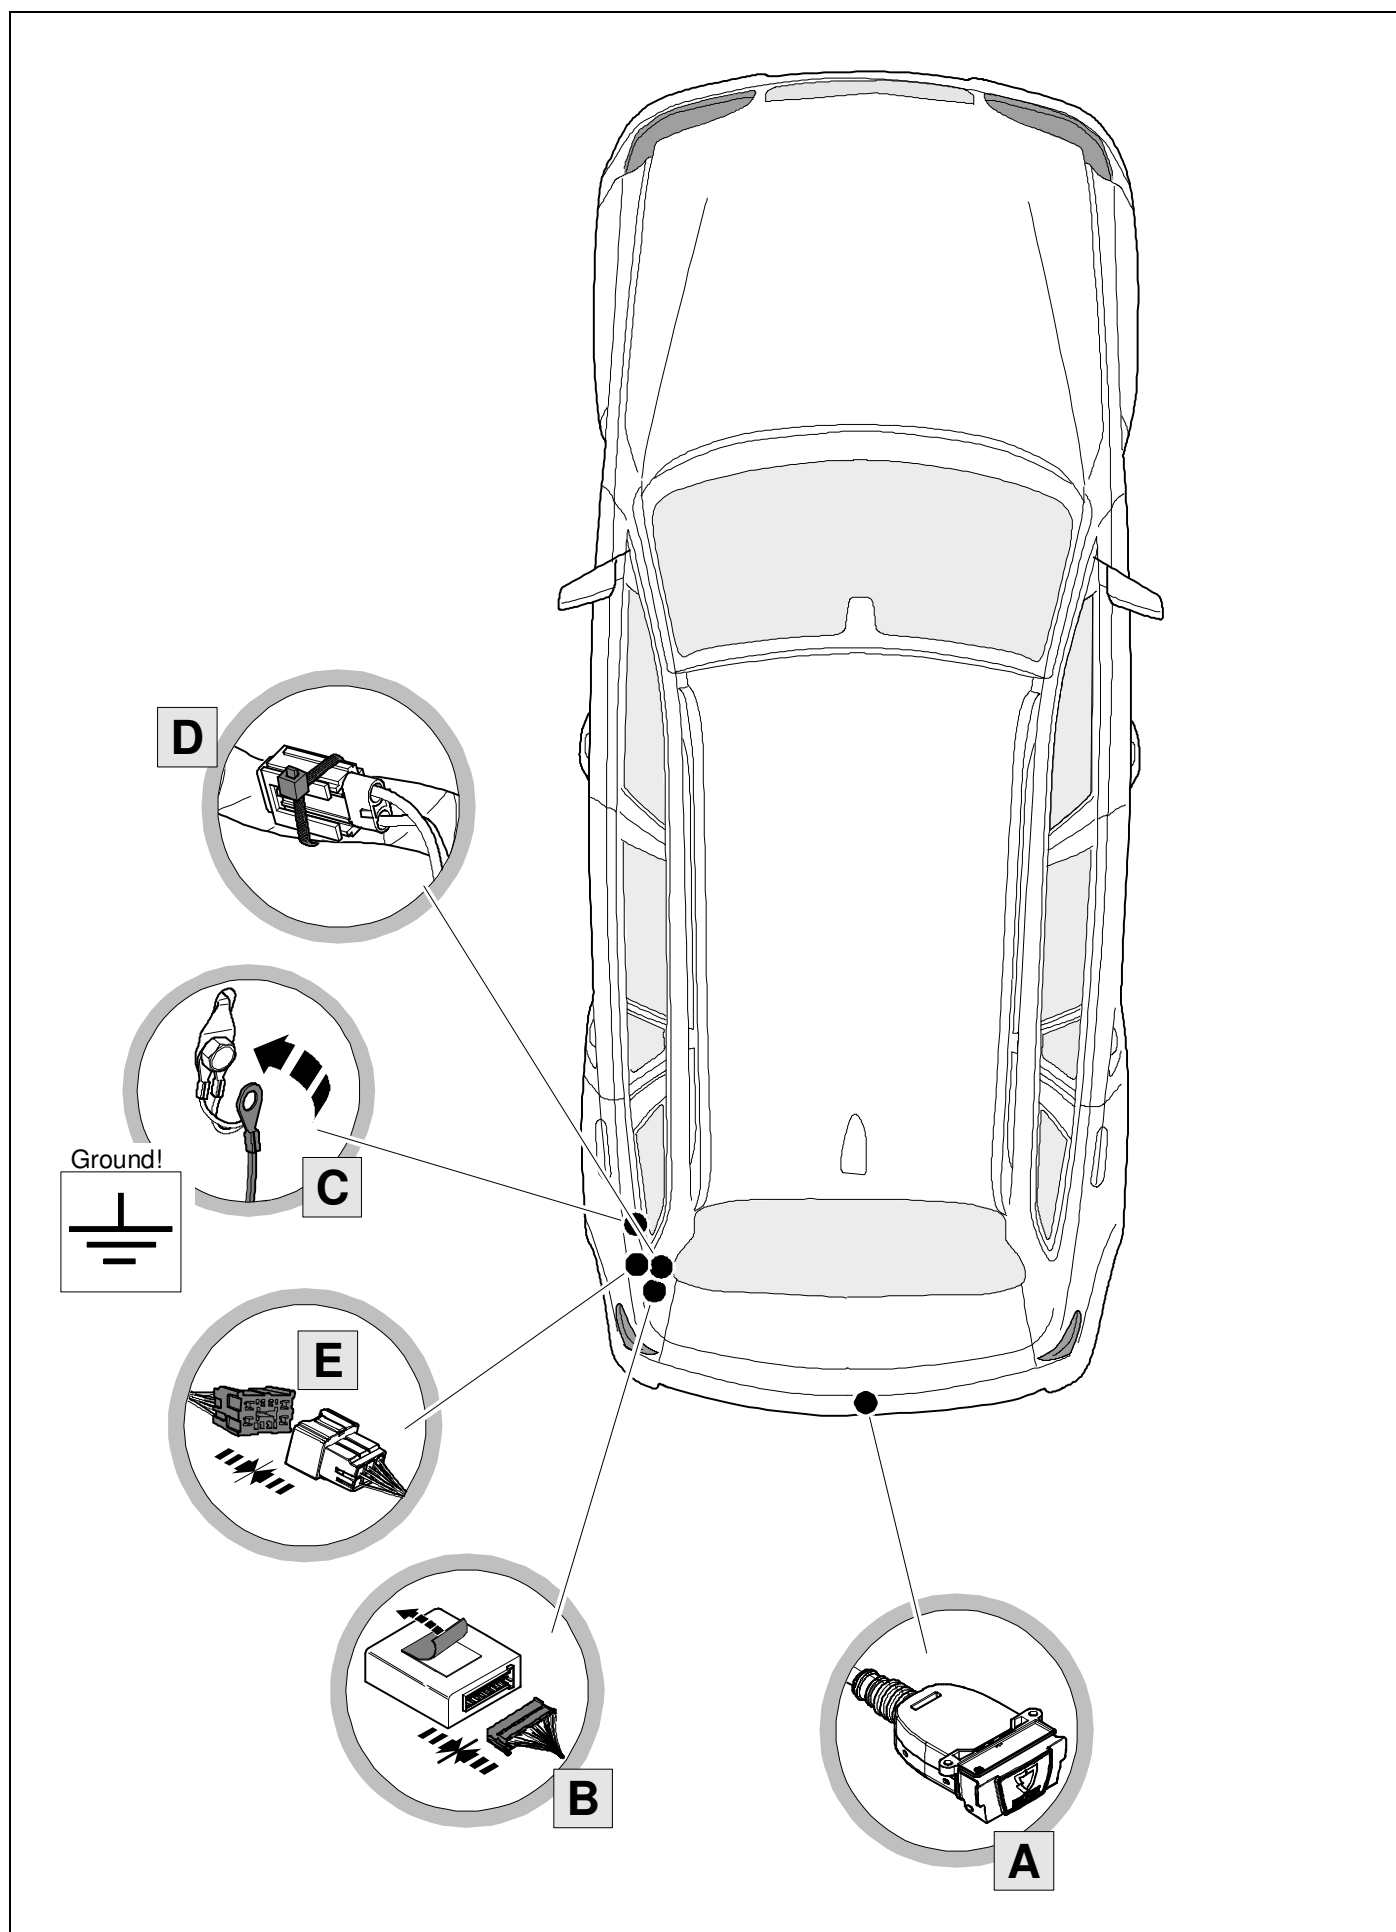

KIT

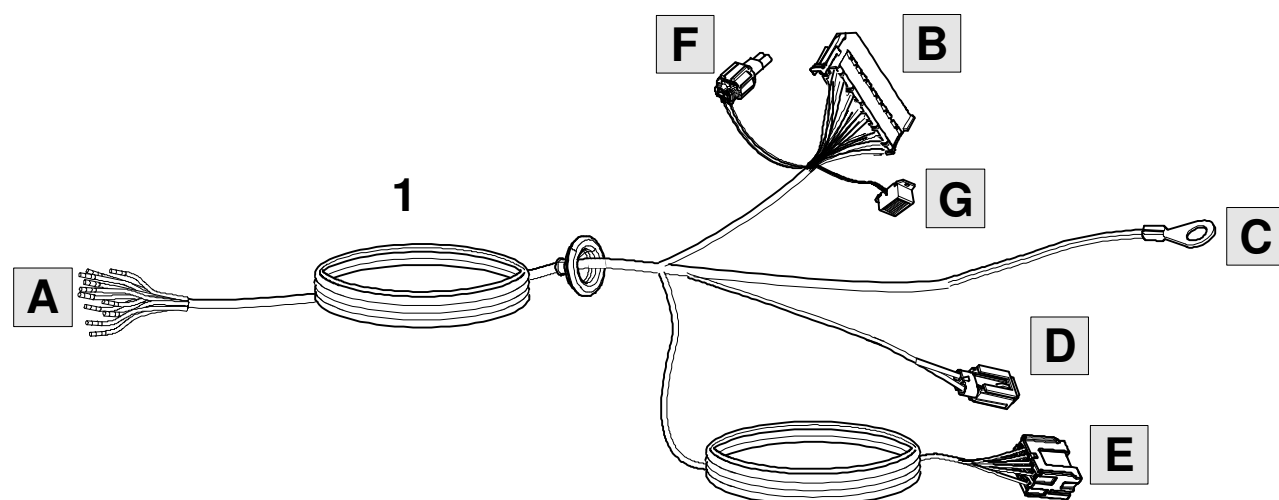


2




3



4




5



6




7




5x

8

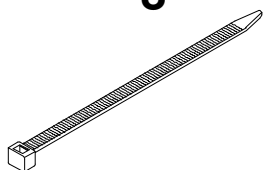

3x

9

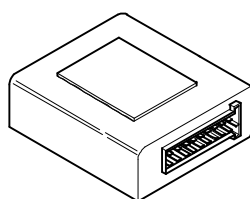


10




2x


11

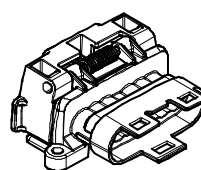


12

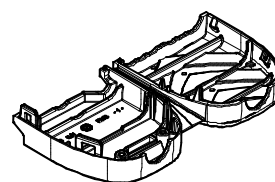

13



14



2x

15




2x

16



17

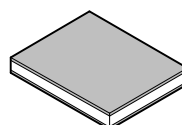

2x

18




19




2x









TOOLS

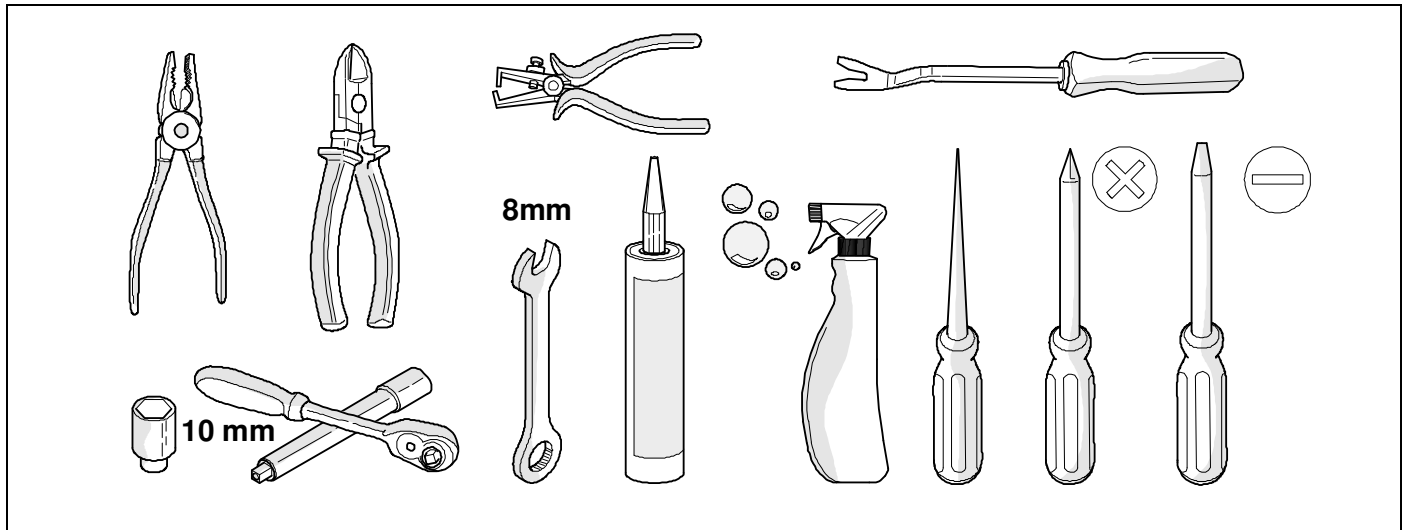


1

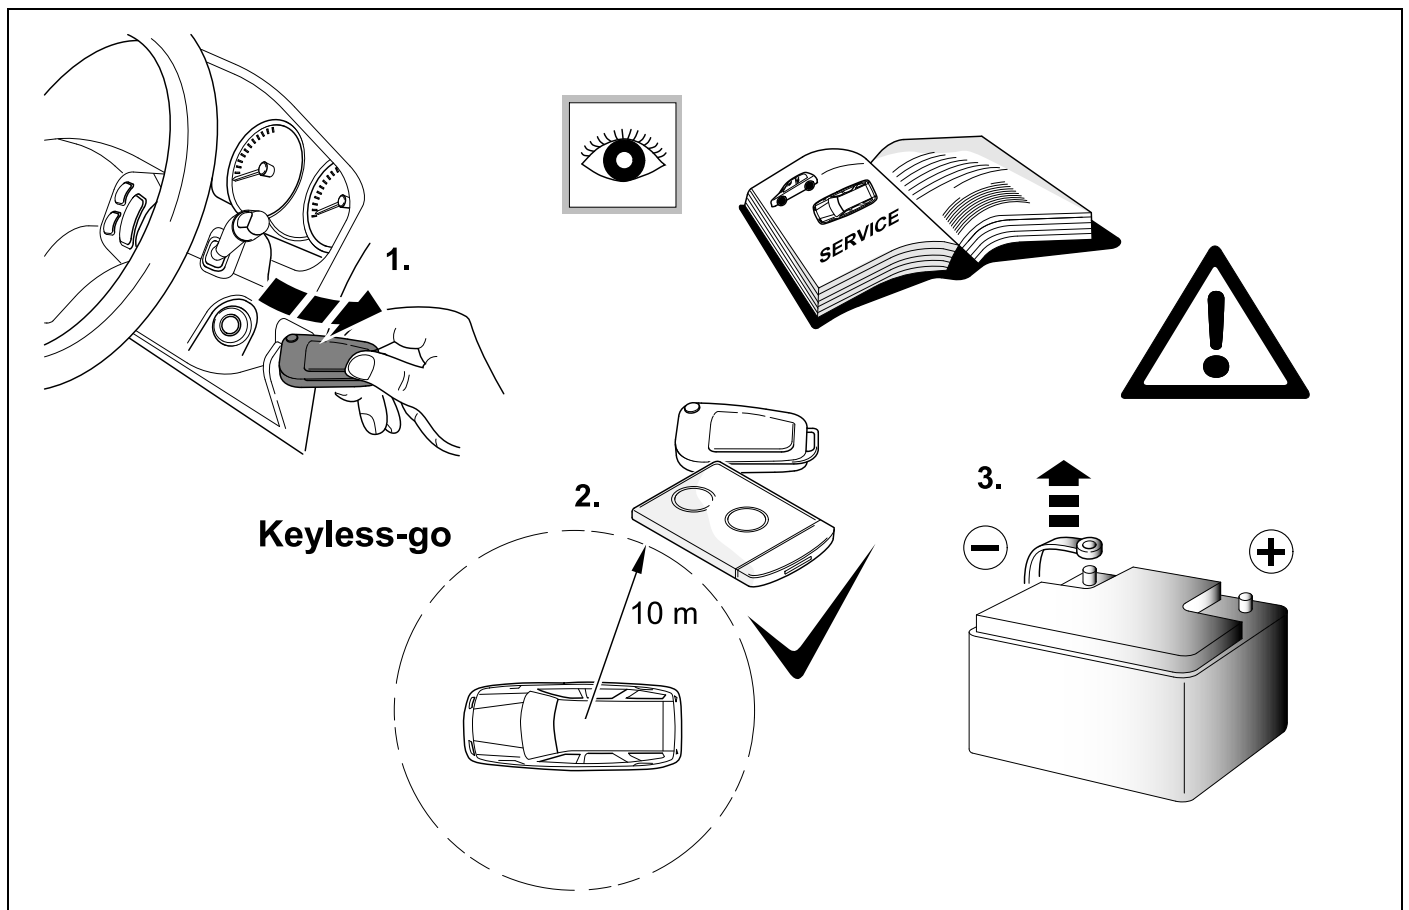


2 REMOVE

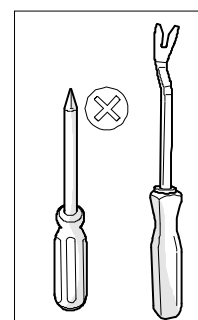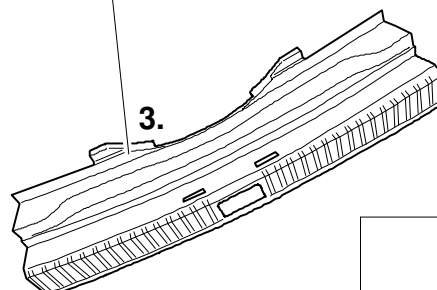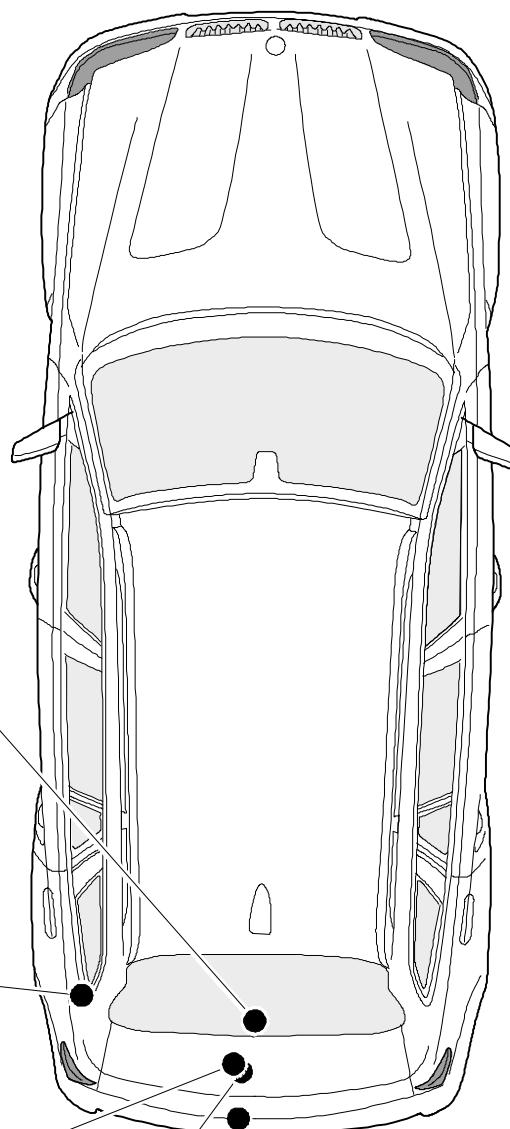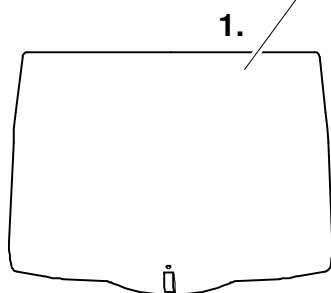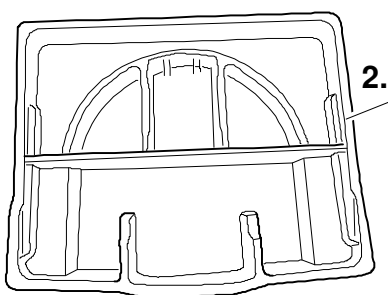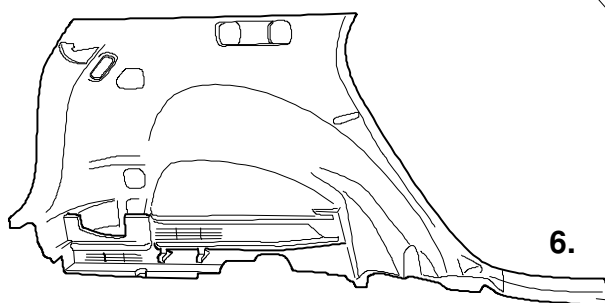
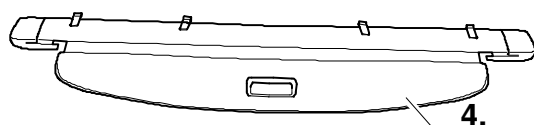
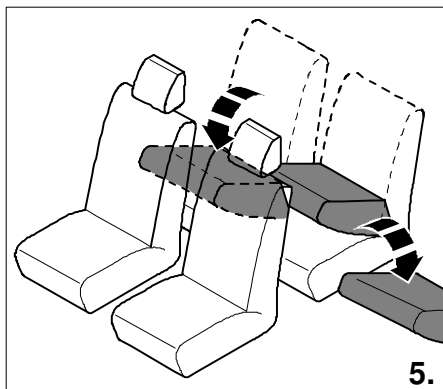


3



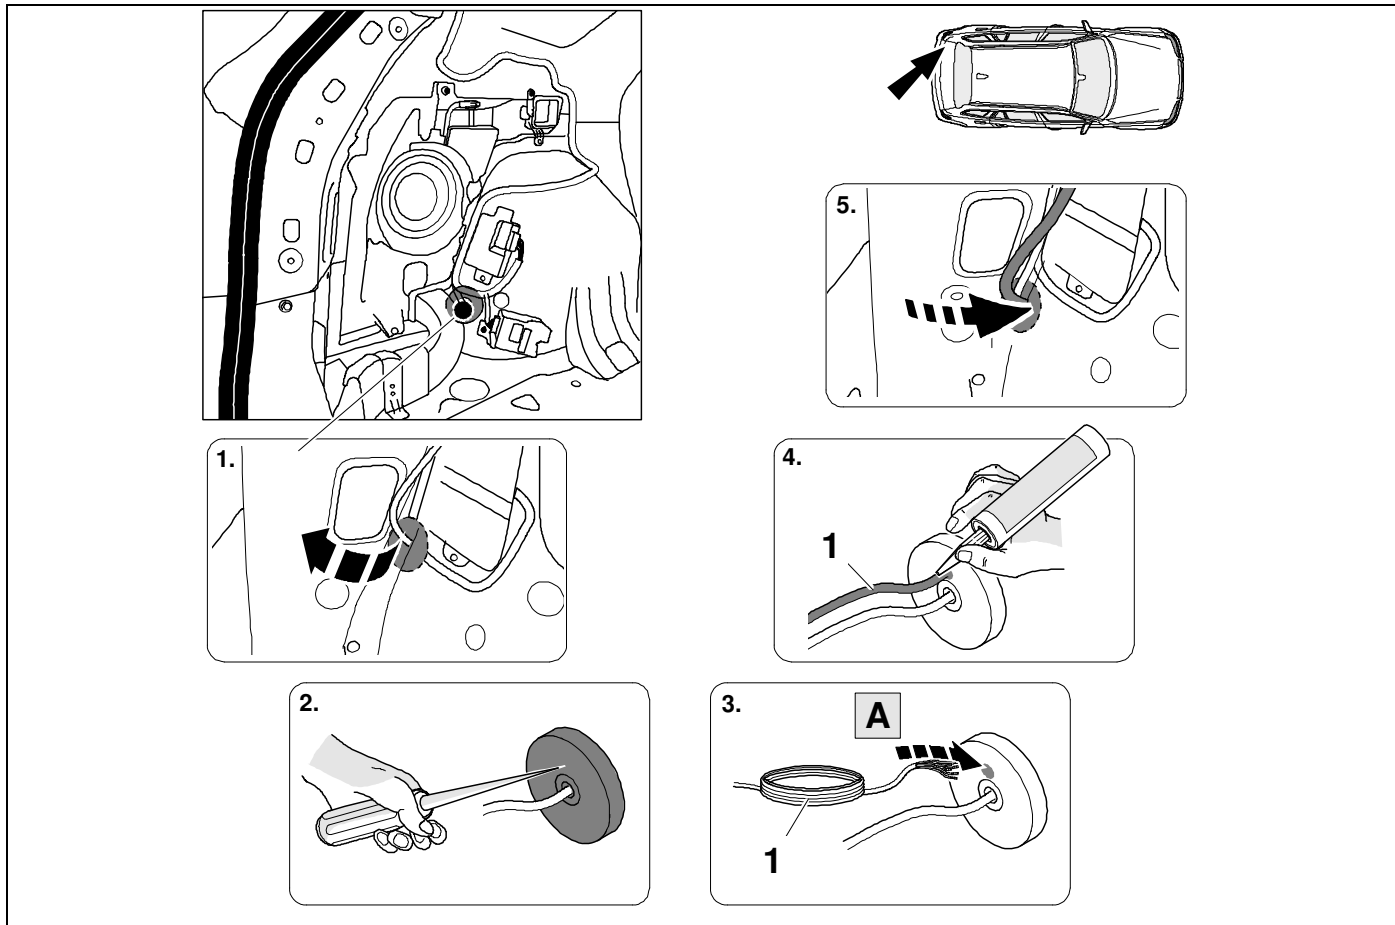


4




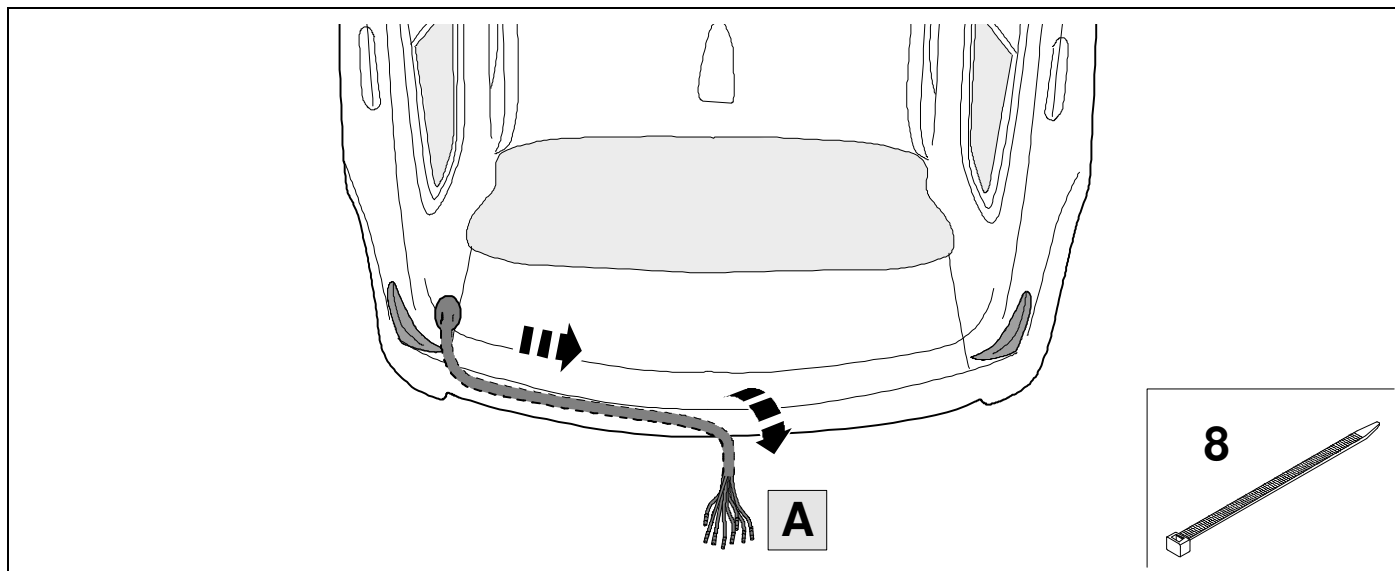


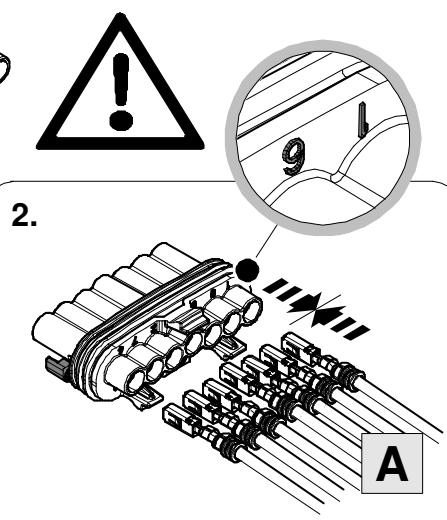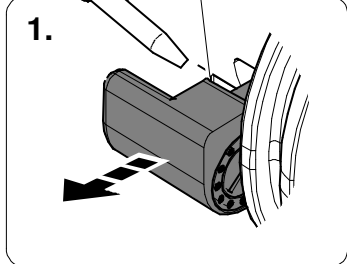
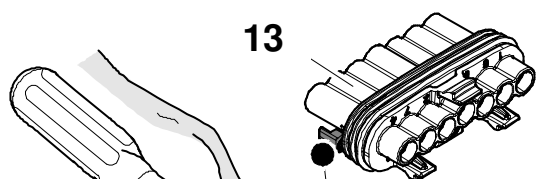


ye	1	← L
rd	6	Stop
bu	5	→ R
wh	3	⊥
bk	2	1 3 2 4 (R)
bn	7	⊥
gn	4	→ R

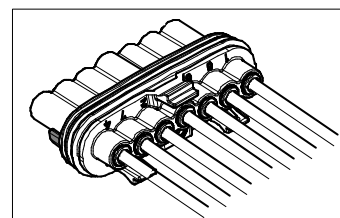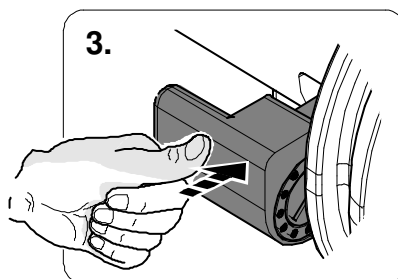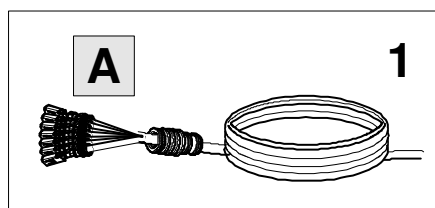

In case of wrong pin insert:

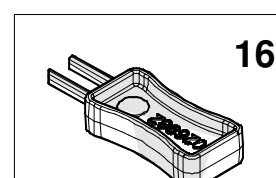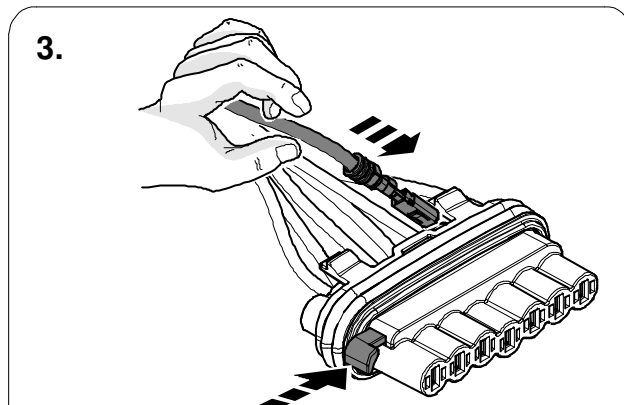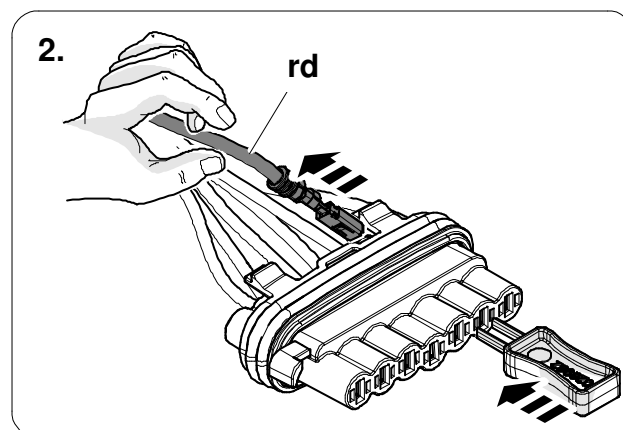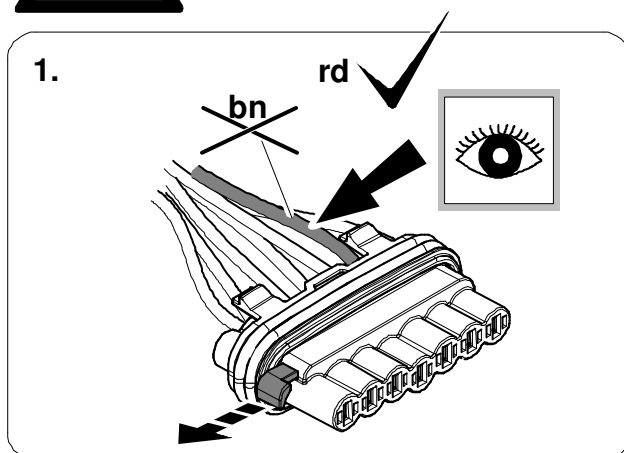

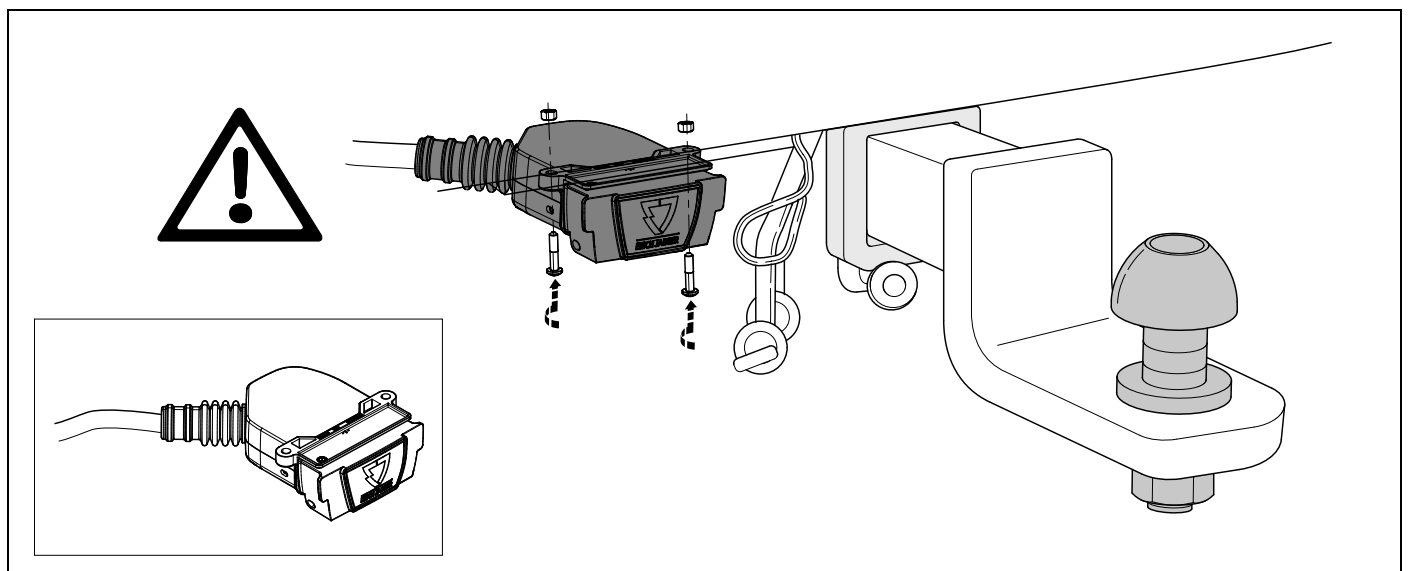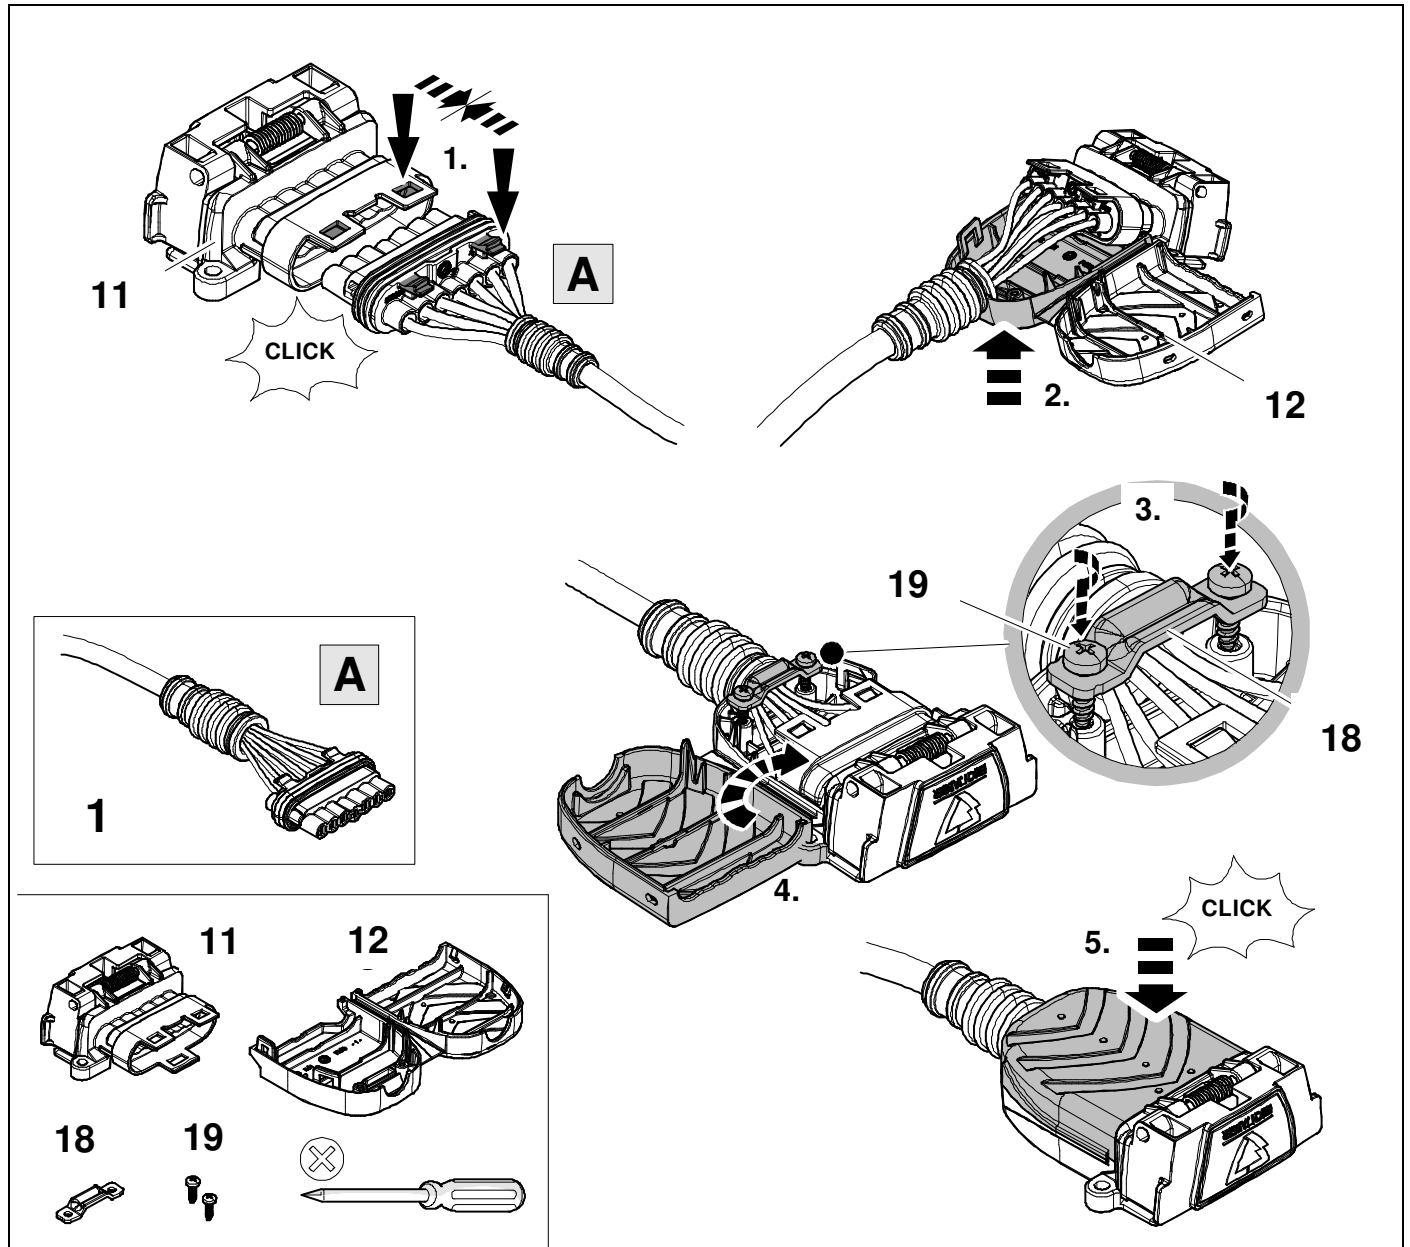

8




9





1	ye	
2	bk	
3	wh	
4	gn	
5	bu	
6	rd	
7	bn	

9	bk	wh	gy	gn	rd	bu	ye	bn	pu	or	no
	black	white	grey	green	red	blue	yellow	brown	purple	orange	not occupied




10

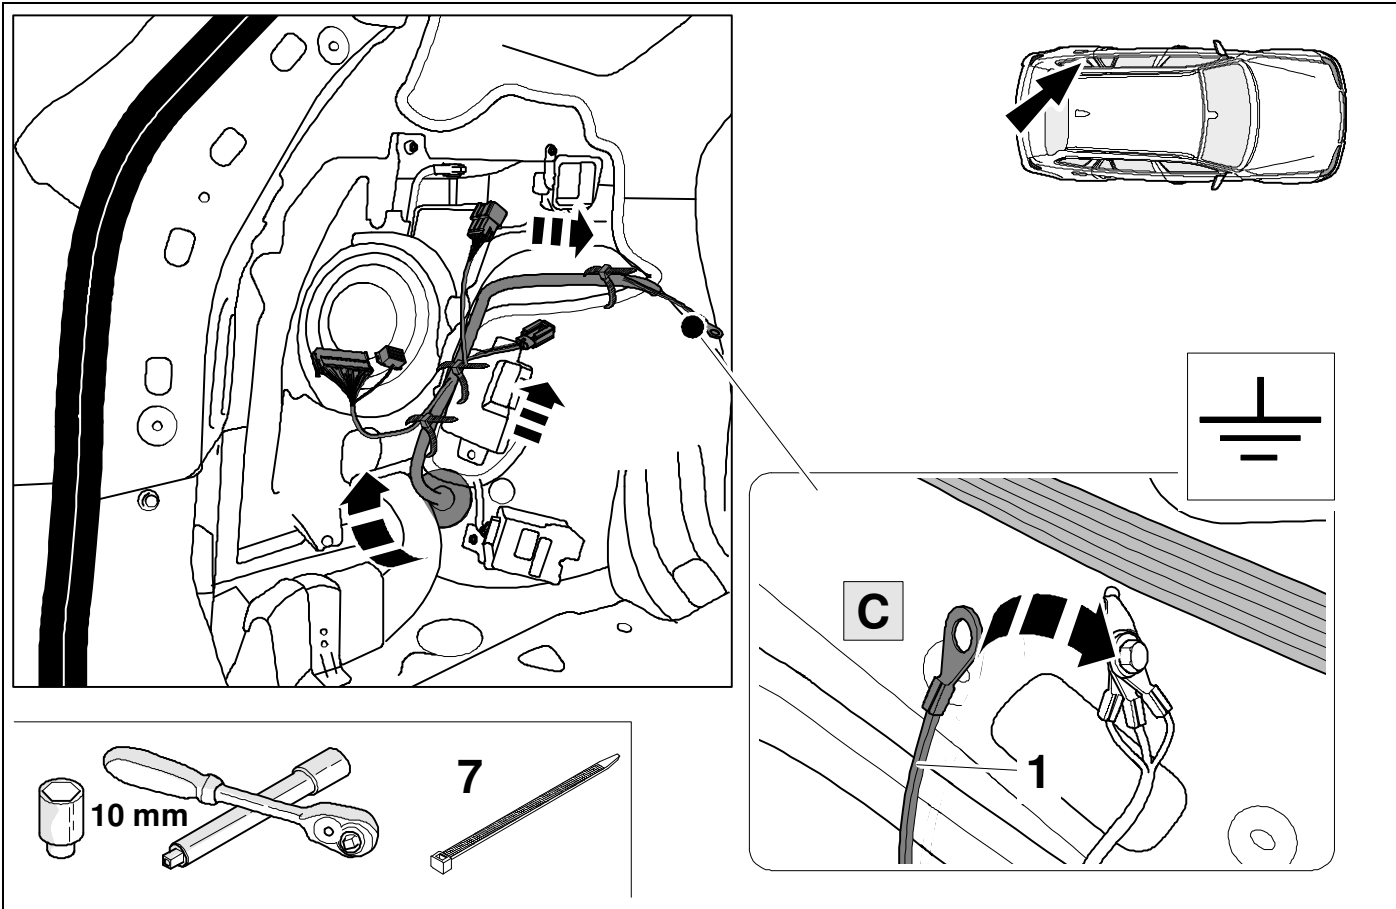


11

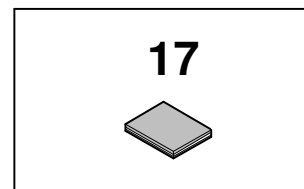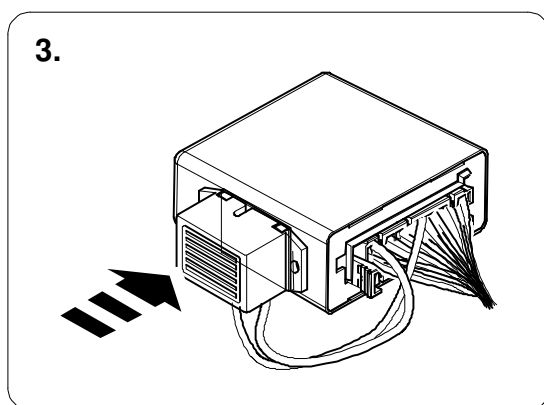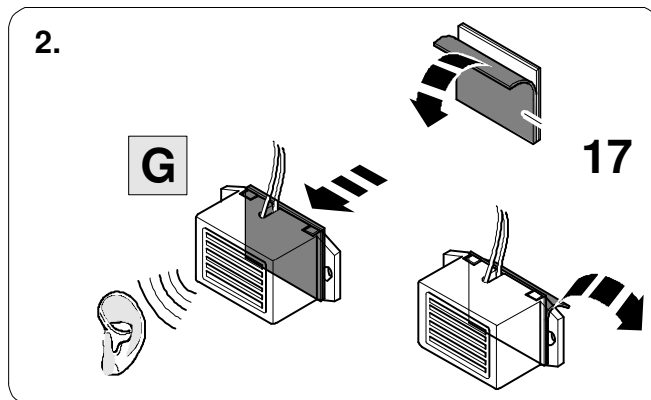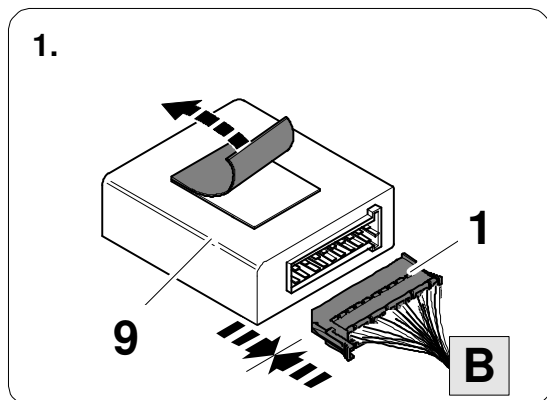


12

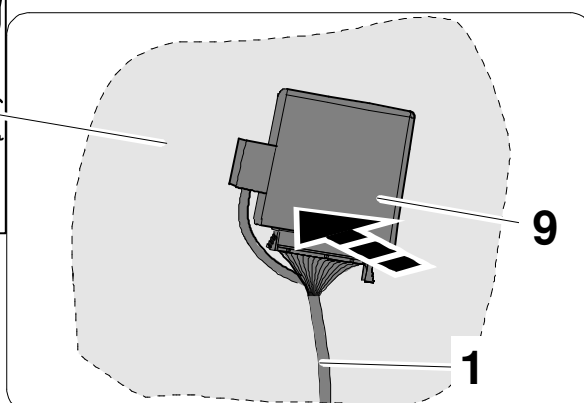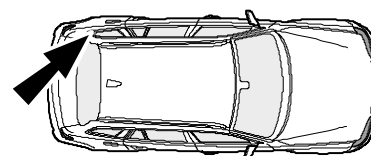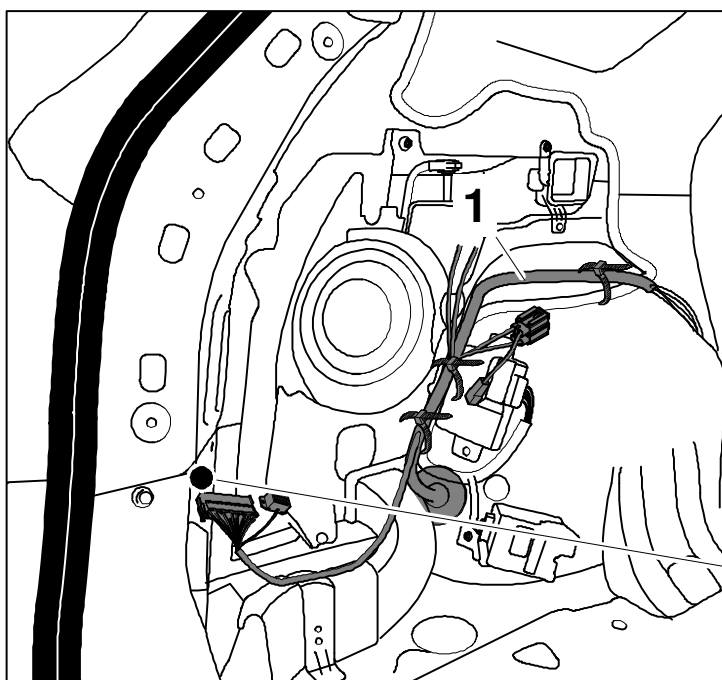

13

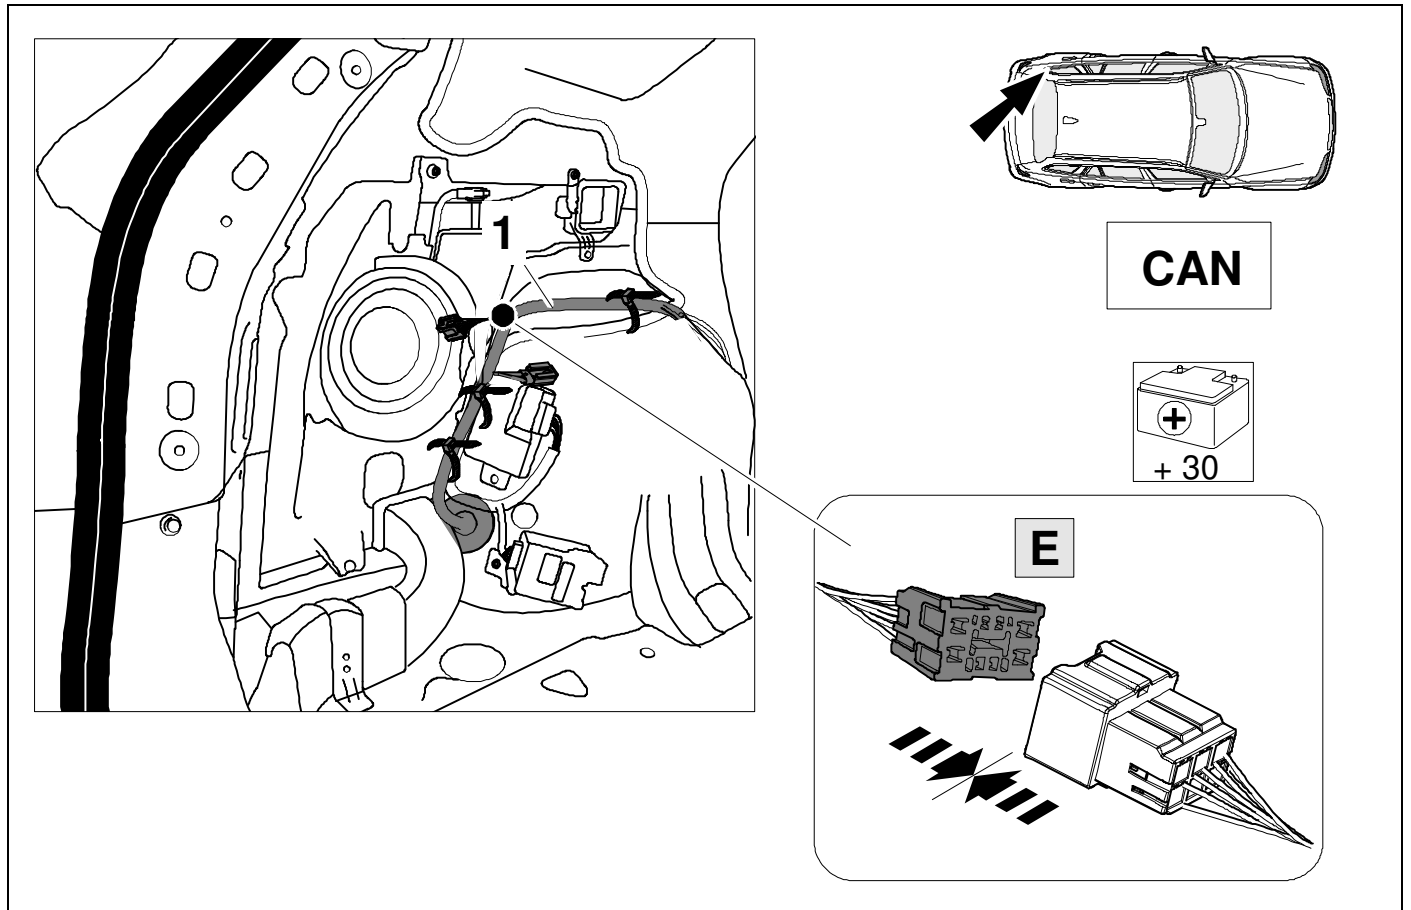


14

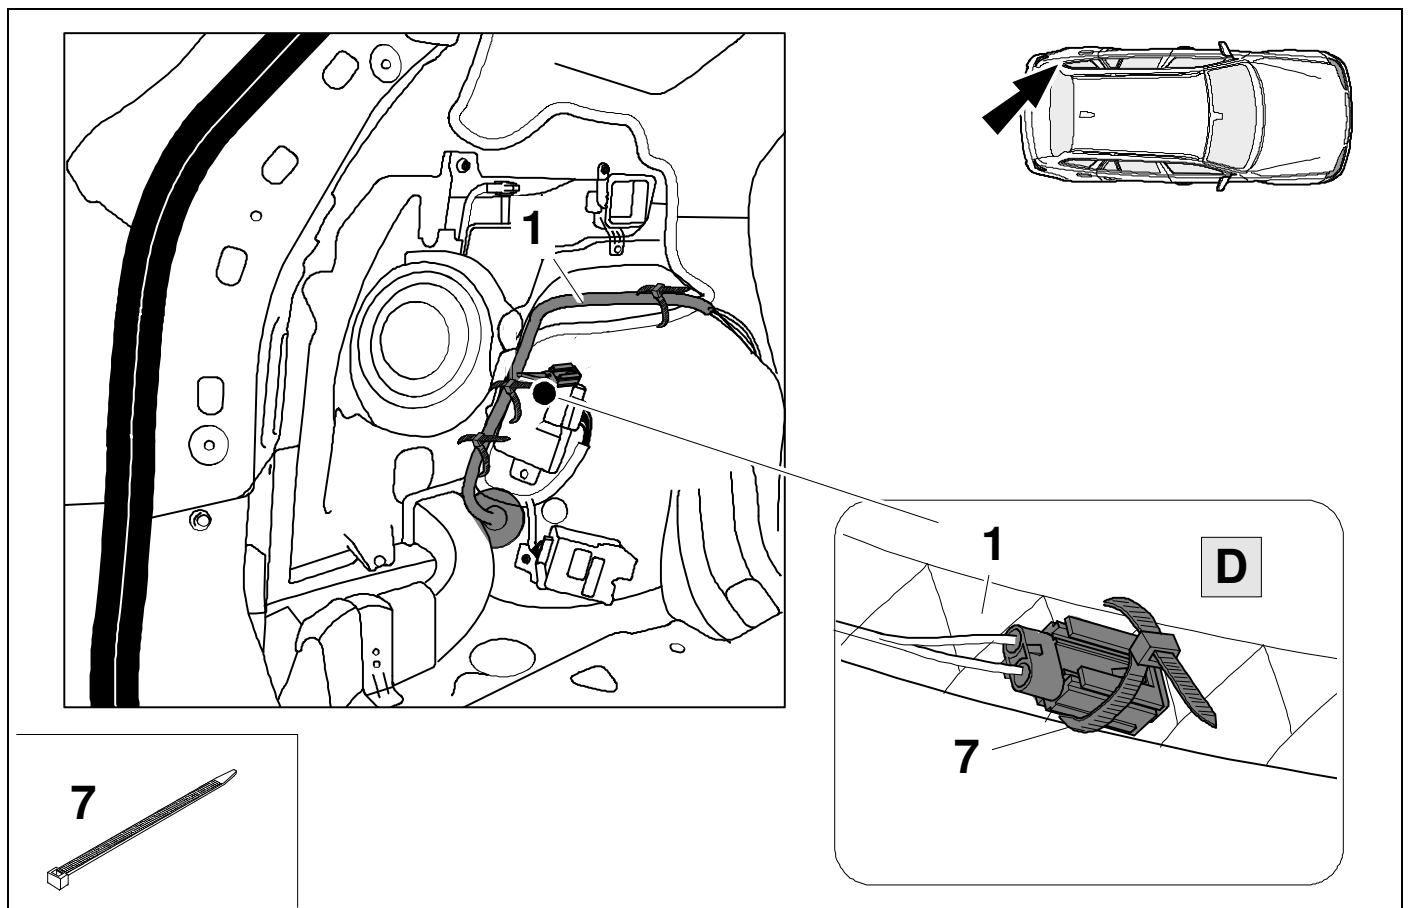



**BRAKE
CONTROLLER
PREPARED**

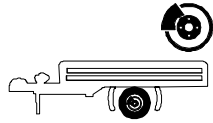


OPTIONAL




Trailer Brake Preparation


1.

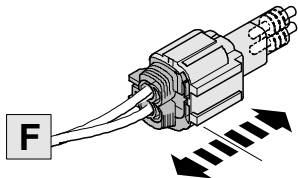


2.

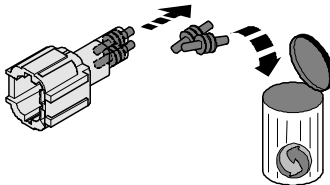


3.

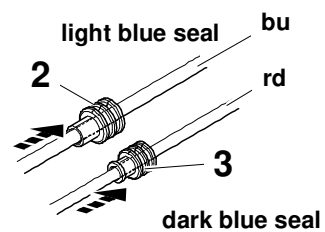


4.

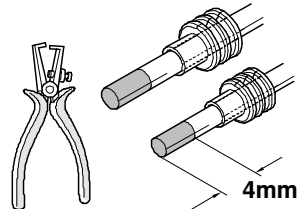





5.

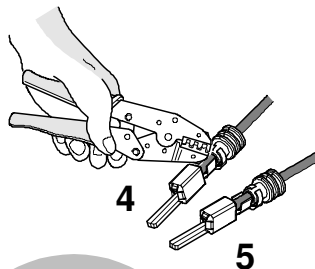

6.

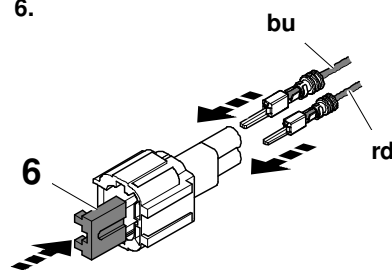


7.

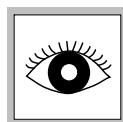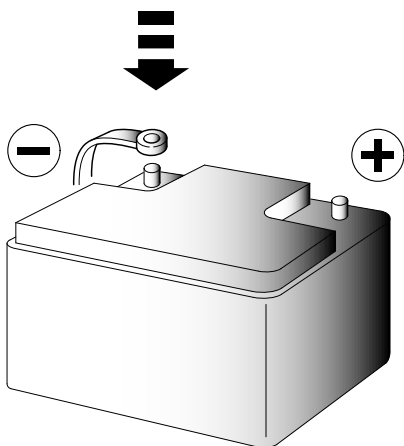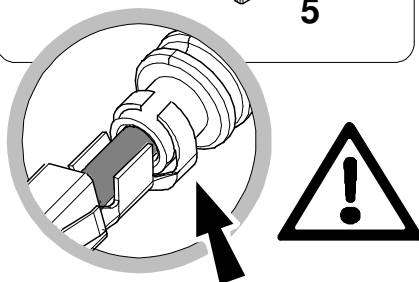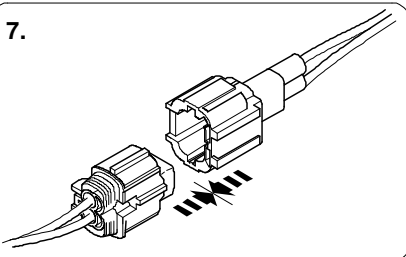


17


CHECK ALL LIGHTING FUNCTIONS

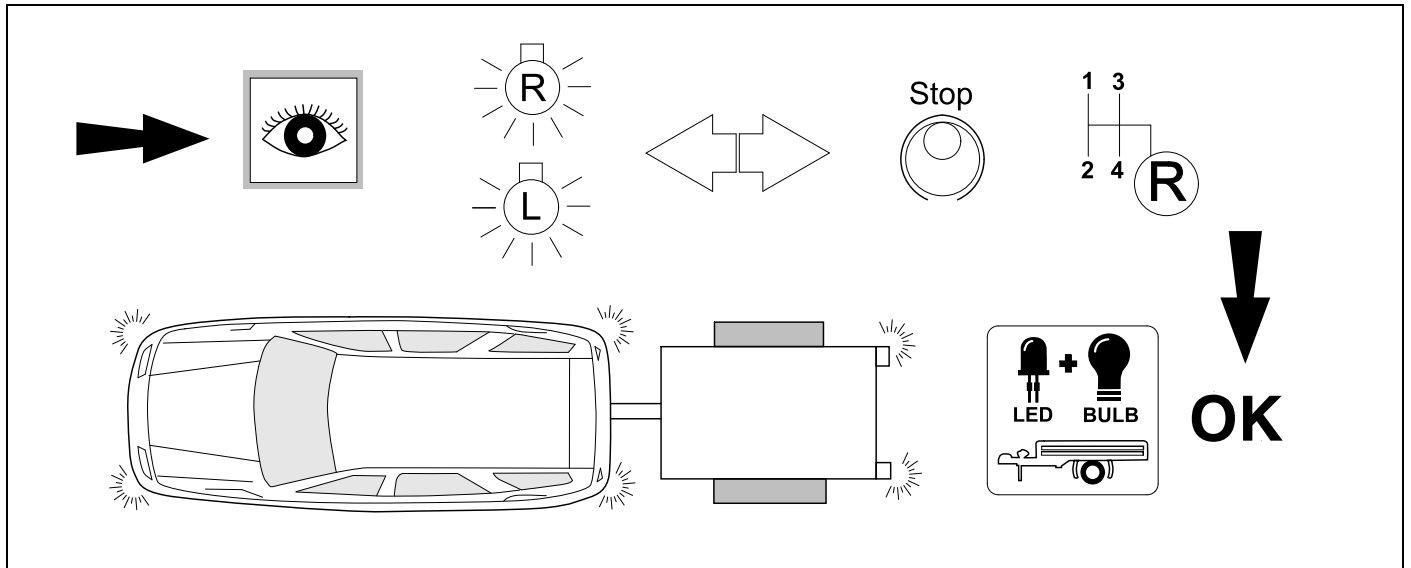

18

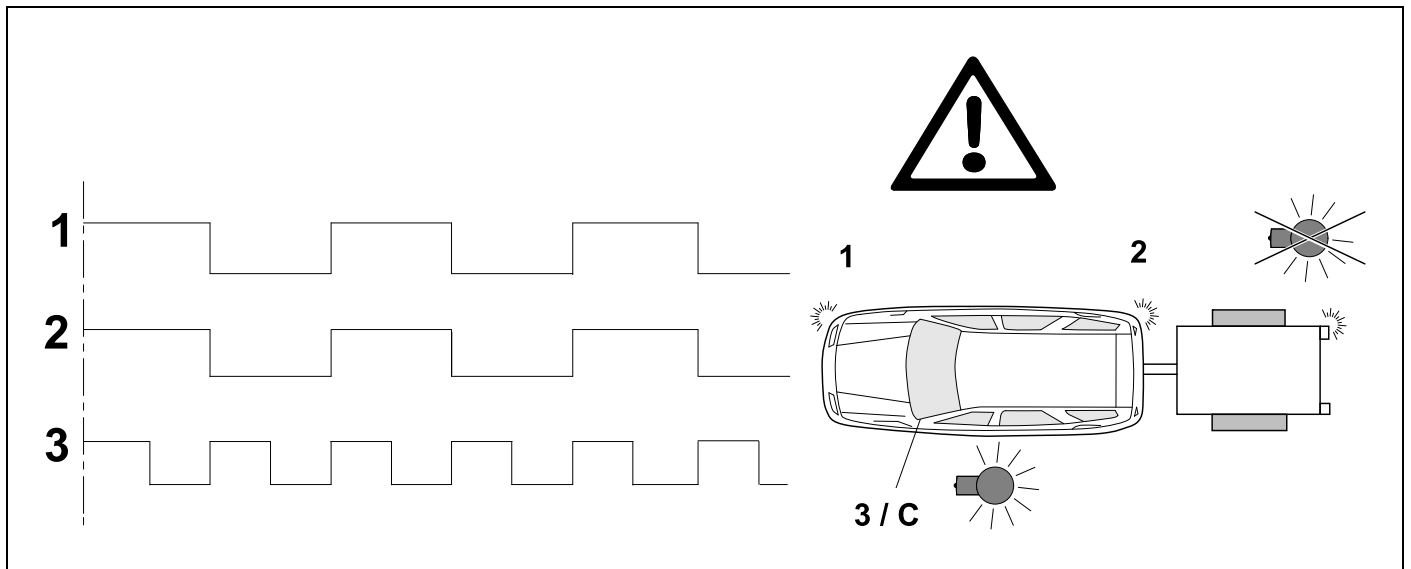


19

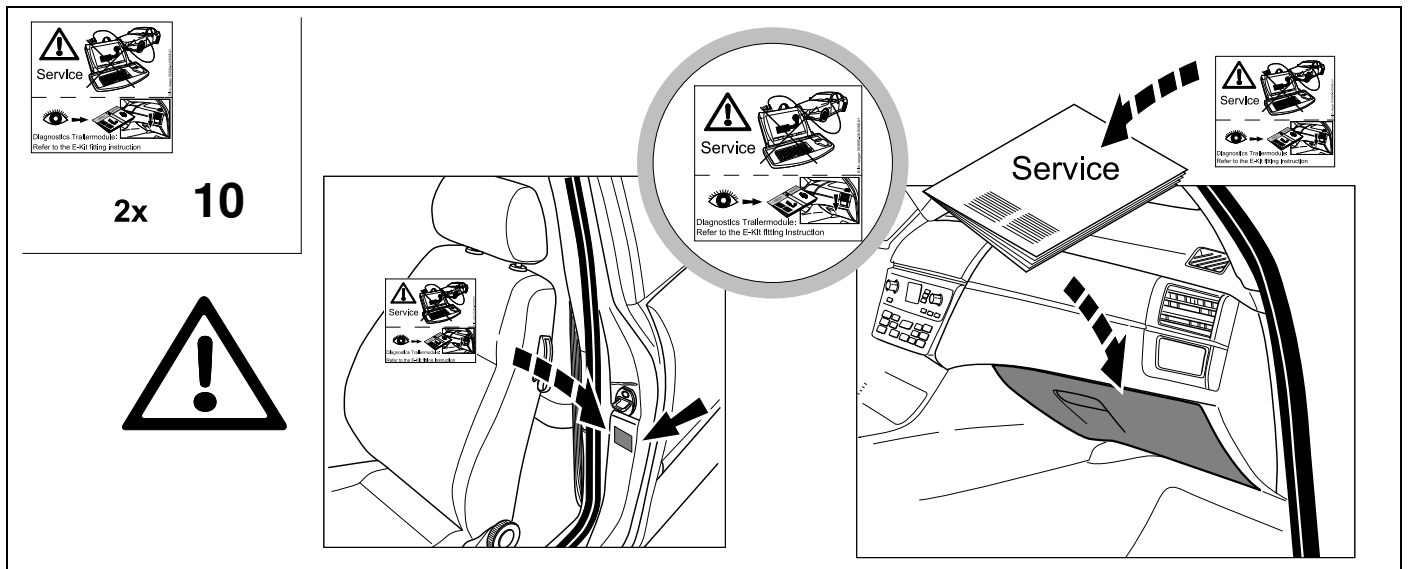


Status LED for self-diagnosis

Operation support

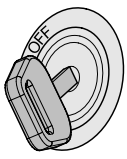

Ignition OFF

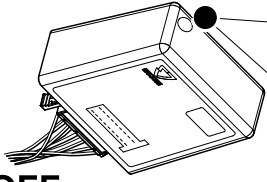





No CAN-Data =






Standby /
Sleepmode



Ignition ON

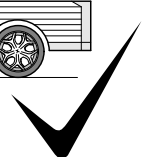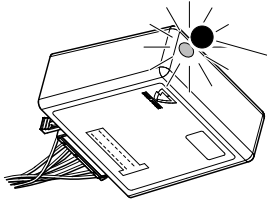

Ignition ON




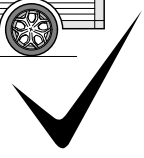

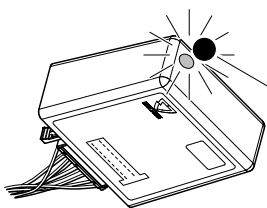


Failure support



Check CAN-Data Wire



Ignition ON

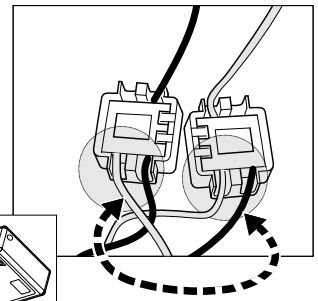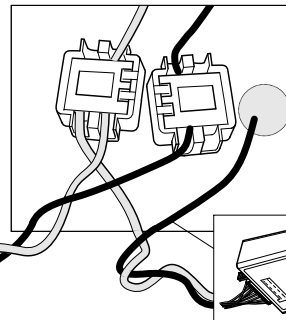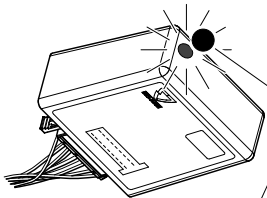



+



1x max 5 min.



Ignition ON

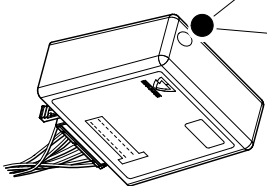





PIN 17


oder / or



PIN 1

31

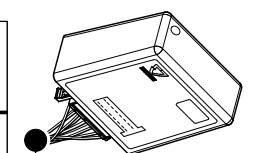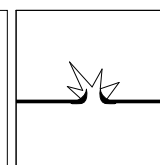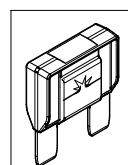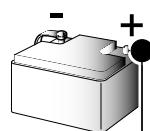

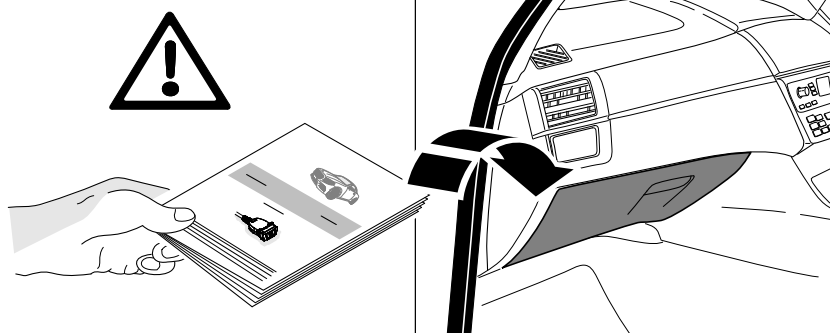

Subject to change in terms of construction, equipment and colour, and may contain errors.
The information and illustrations are non-binding.