




ERICH JAEGER

Installation instructions

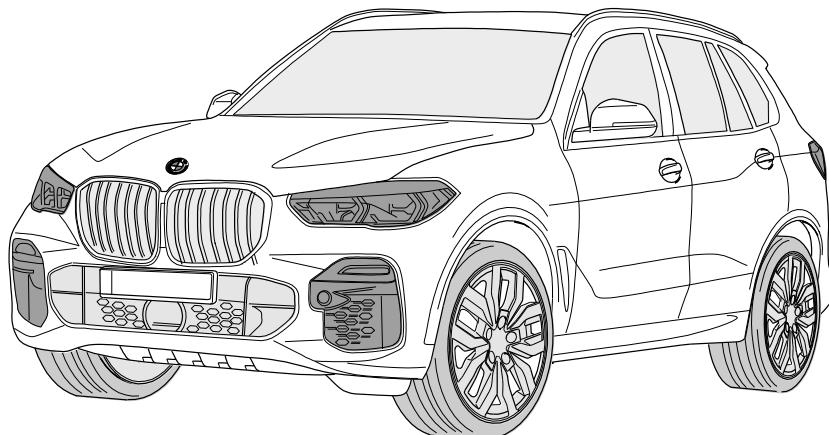


750113EJ

BMW X5 / G05

11/18 - 06/23



SCAN FOR
LATEST
INSTRUCTIONS

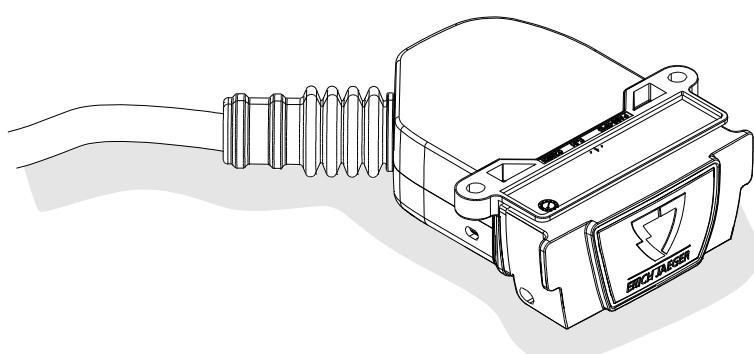

Reference:

The following information must be reviewed before beginning the assembly:

The installation instructions are to be thoroughly read.


The installation should be carried out by qualified personnel with the relevant technical knowledge.

The vehicle manufacturers' current technical notices and information on retrofitting must be followed.


The removal and replacement instructions found in the current repair manuals must be followed.

It must be ensured that the vehicle is technically suitable for the installation of a trailer hitch.


OVERVIEW

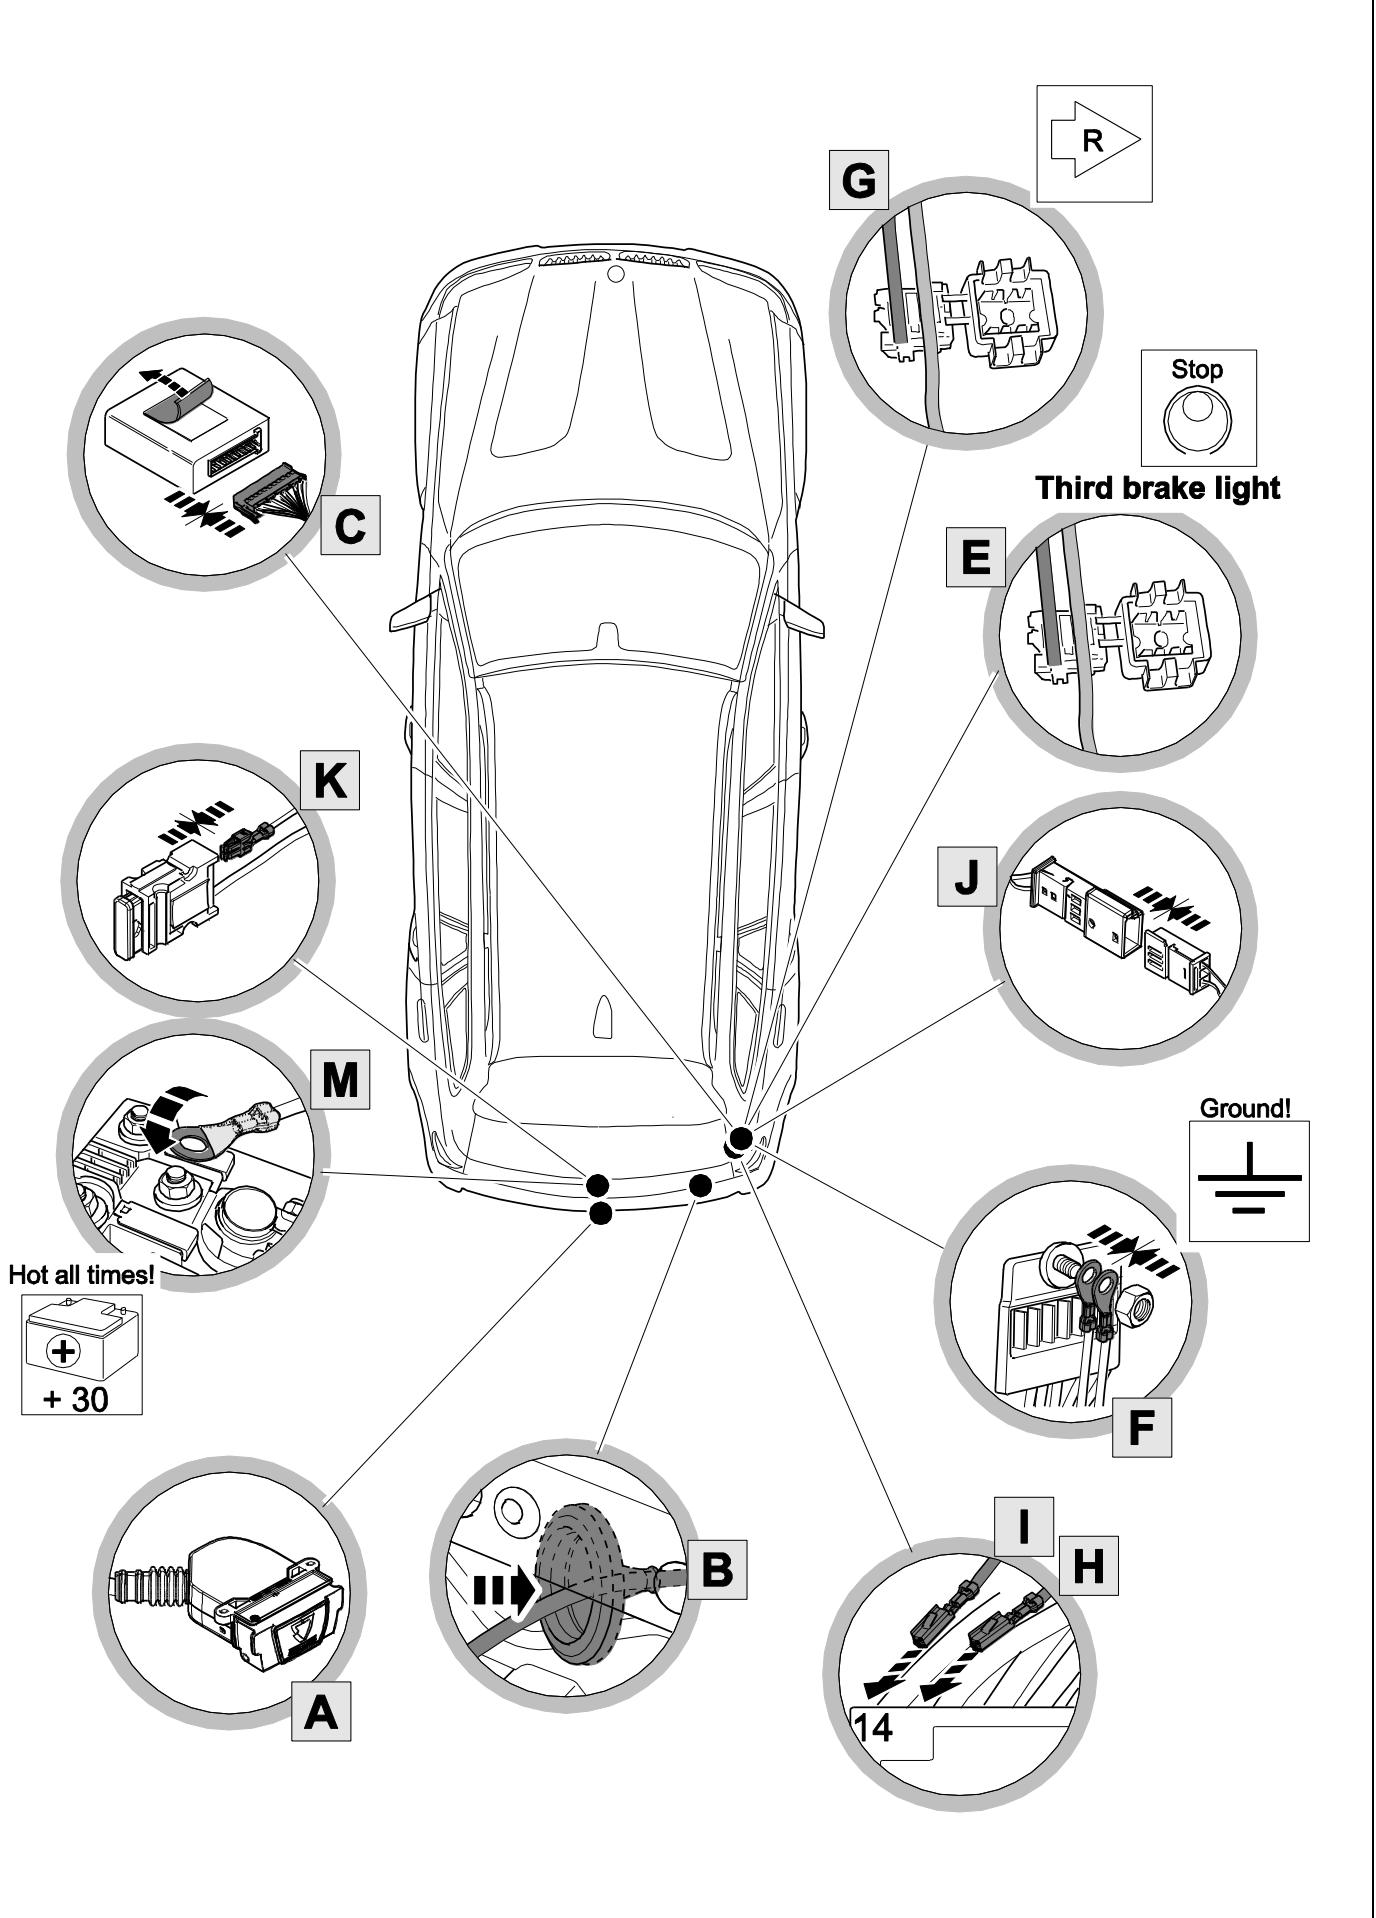


KIT

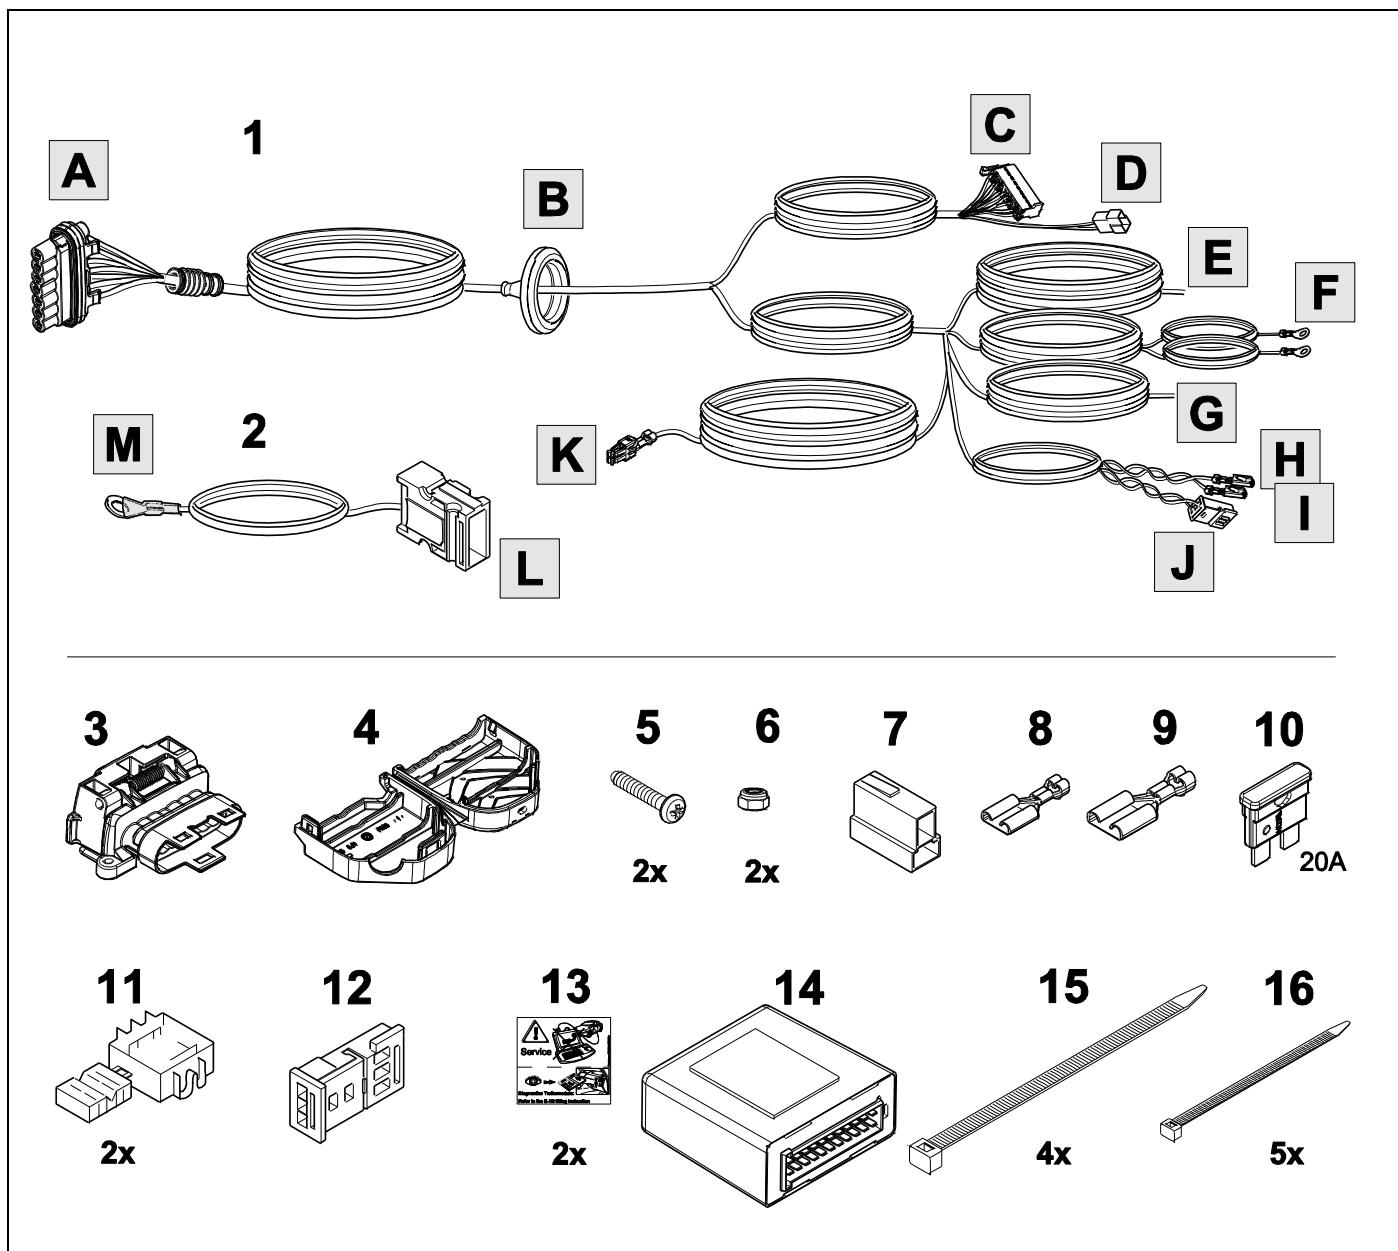














TOOLS

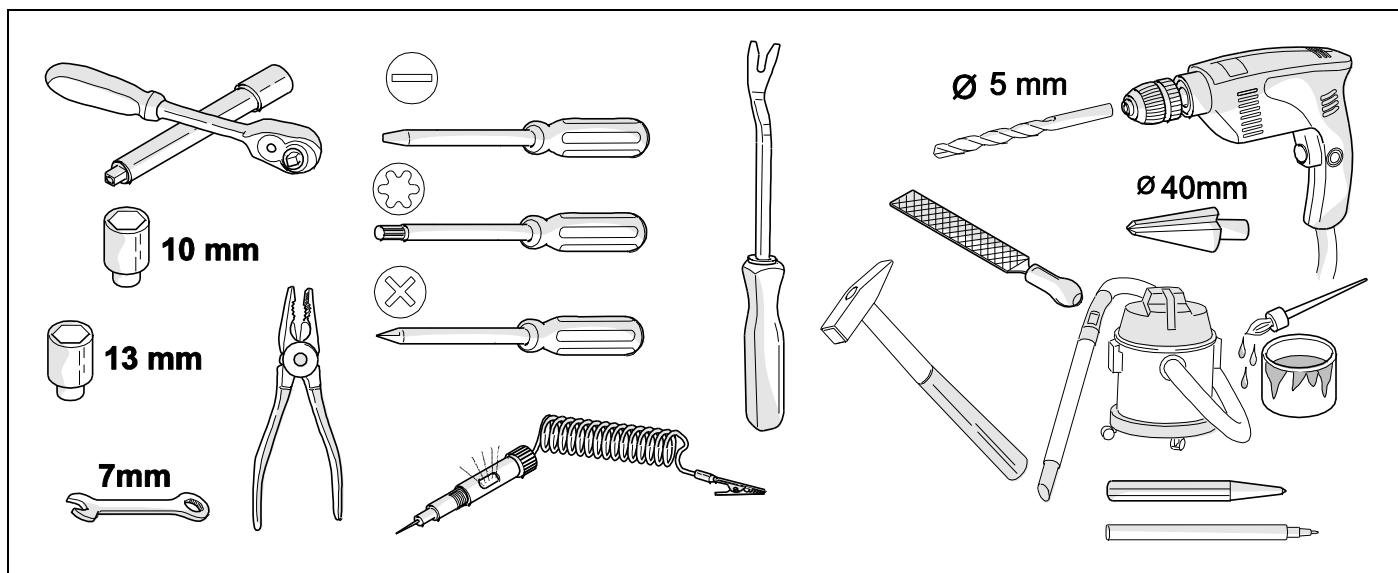

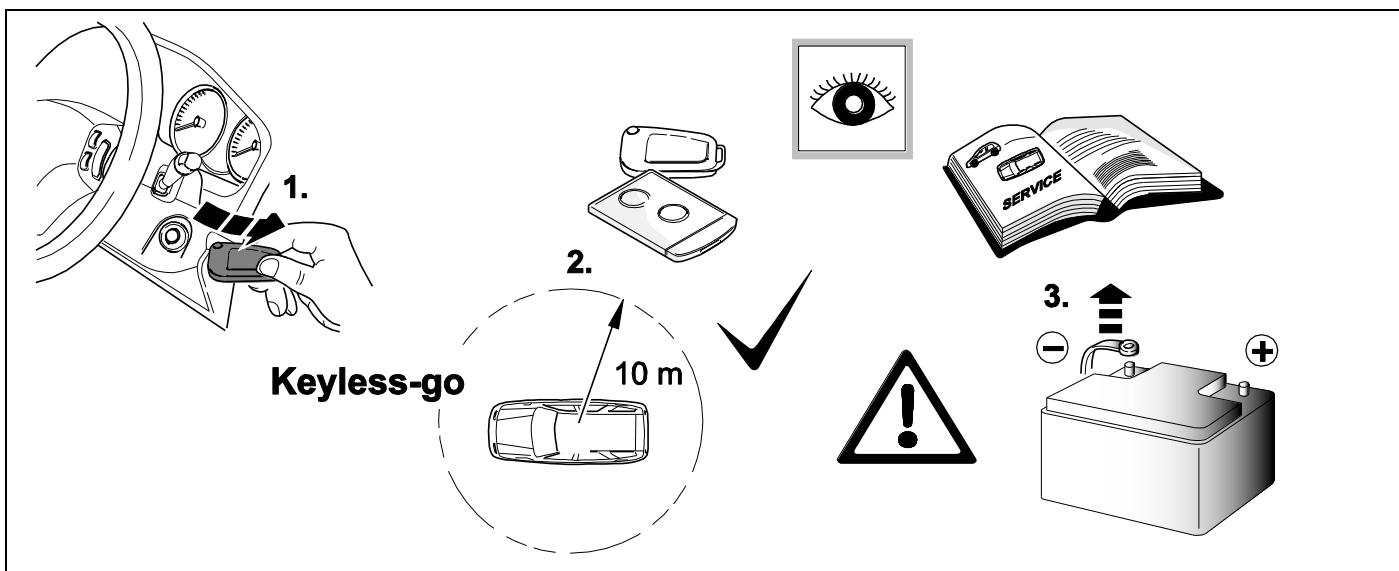
1

2 REMOVE

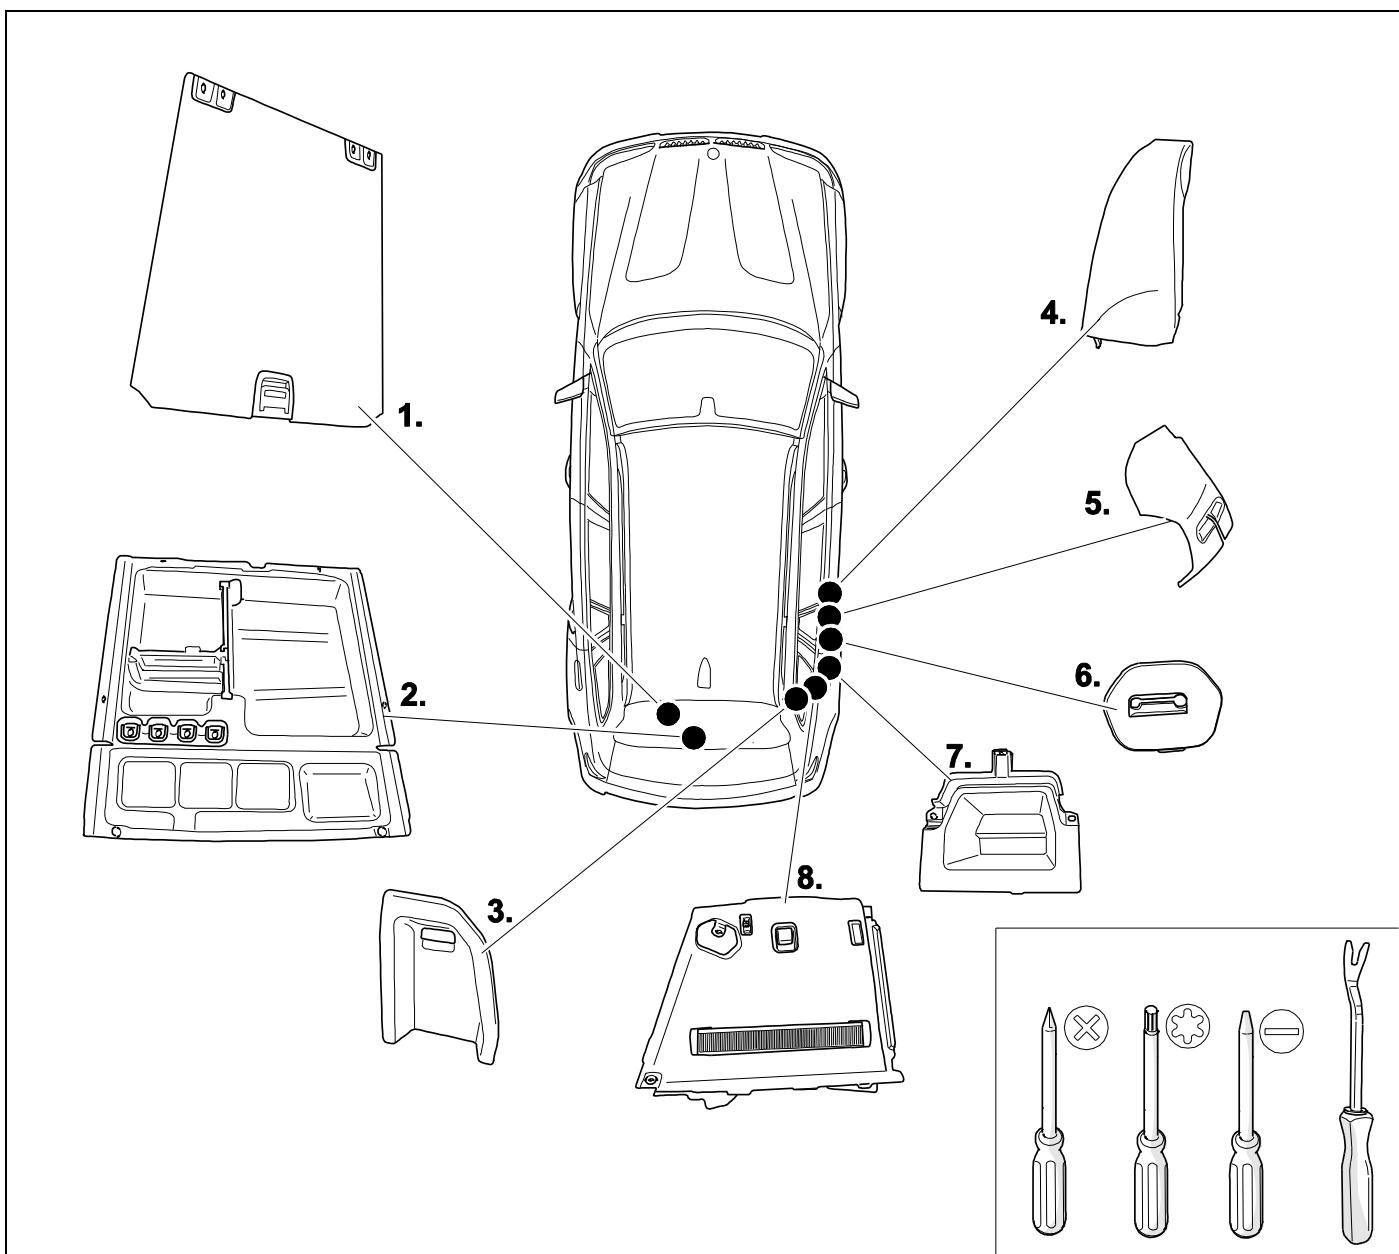

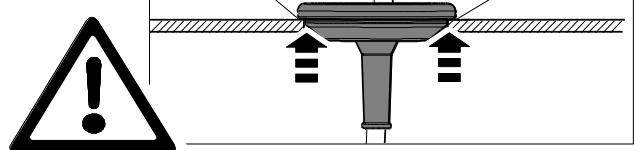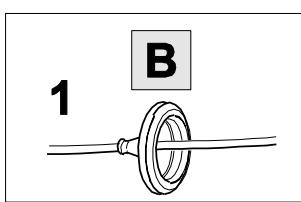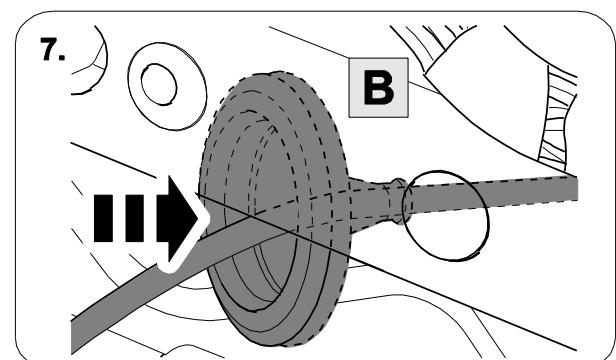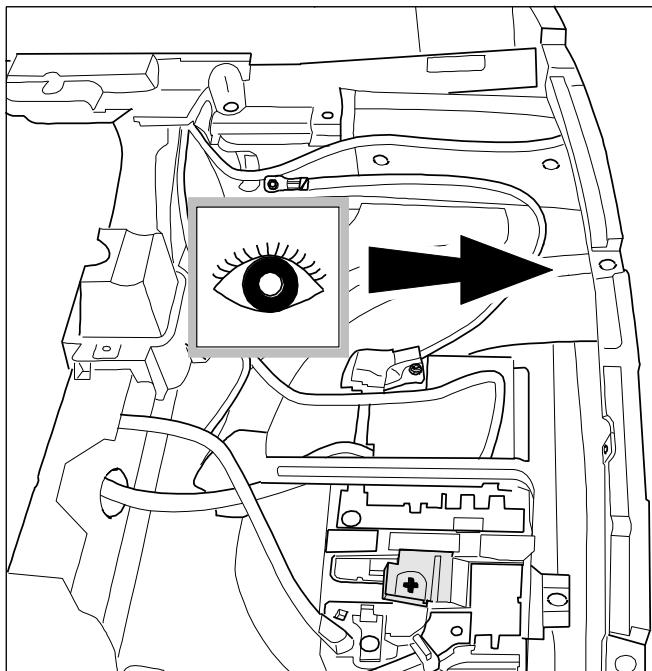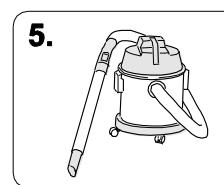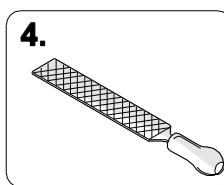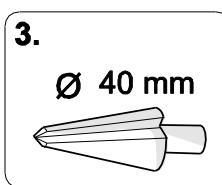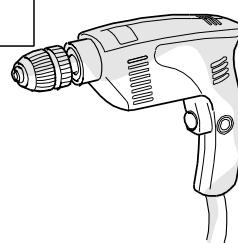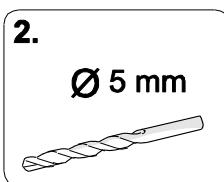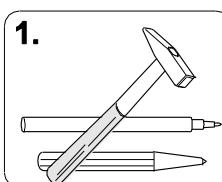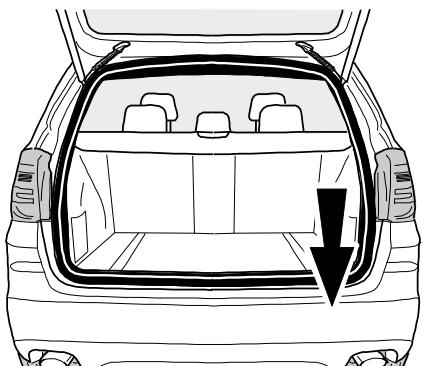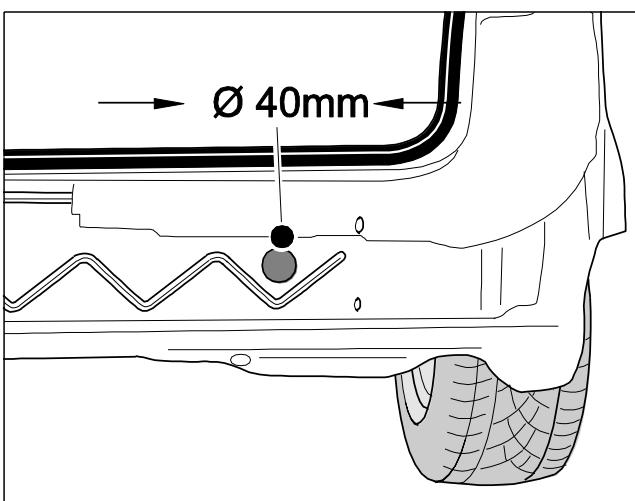

4

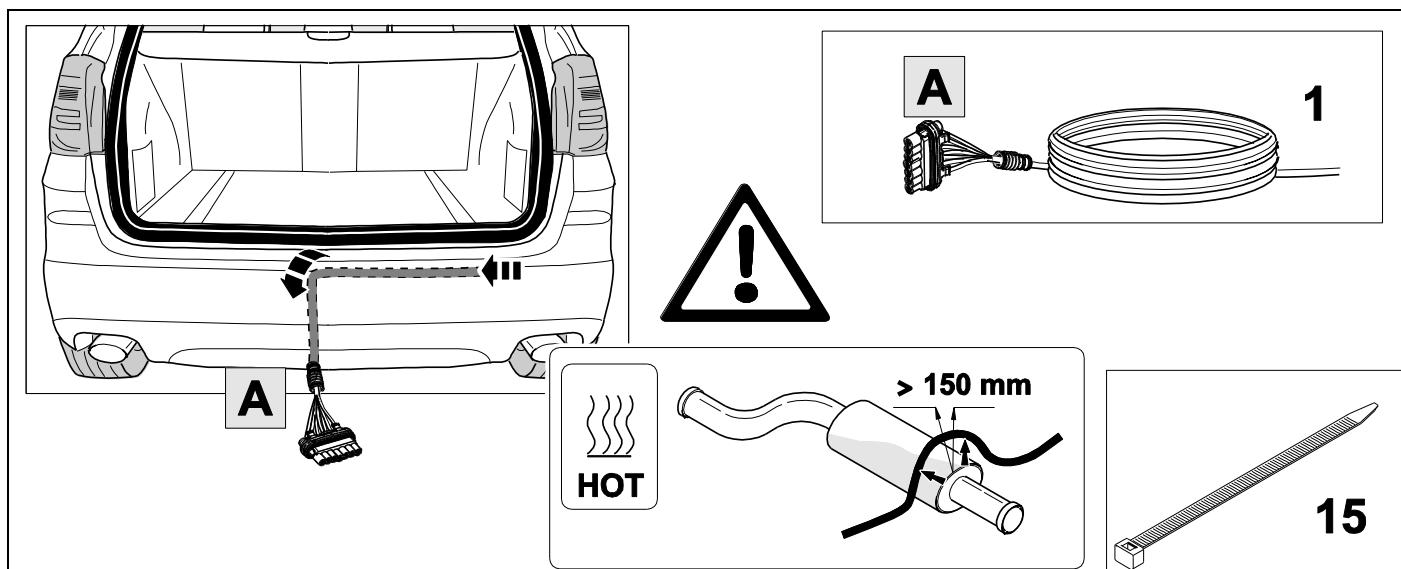



5



⇒

7

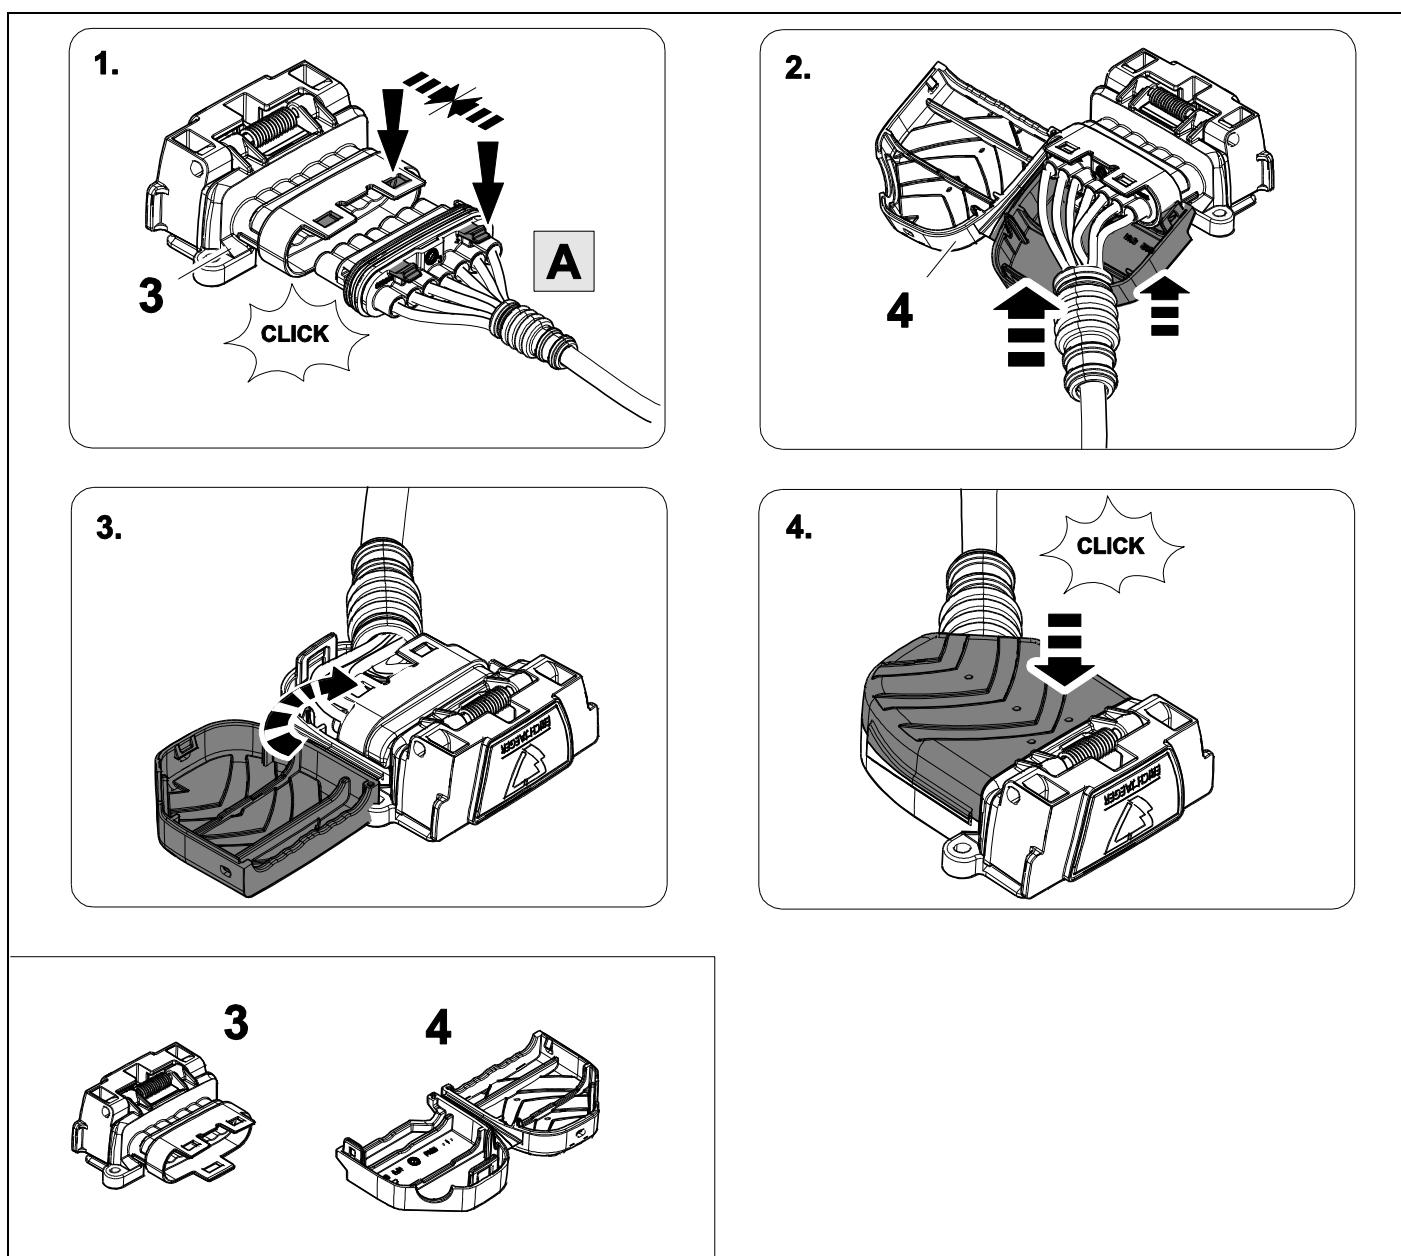

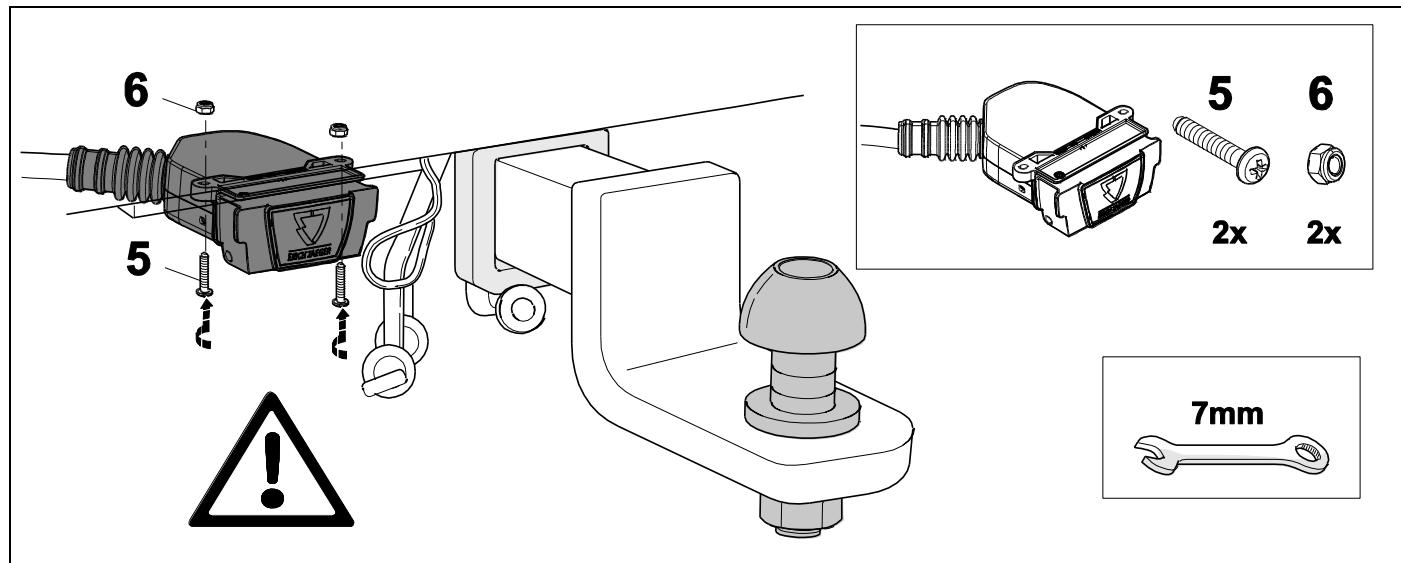6**7****8**

1	ye	
2	bk	
3	wh	
4	gn	
5	bu	
6	rd	
7	bn	





8	bk	wh	gy	gn	rd	bu	ye	bn	pu	or	no
---	----	----	----	----	----	----	----	----	----	----	----

	black	white	grey	green	red	blue	yellow	brown	purple	orange	not occupied
--	-------	-------	------	-------	-----	------	--------	-------	--------	--------	--------------

9






8

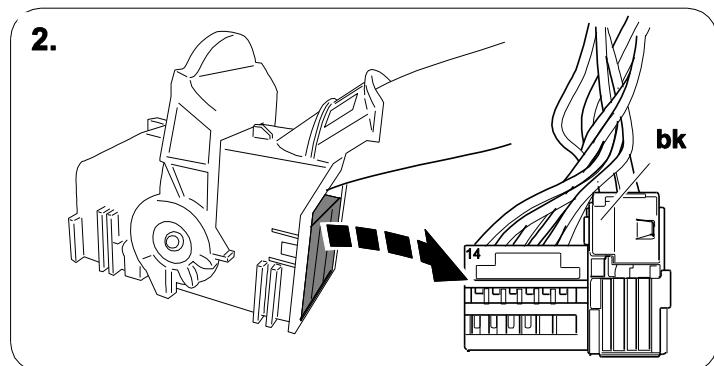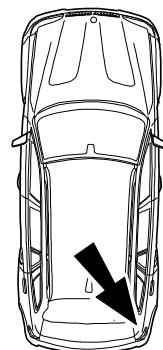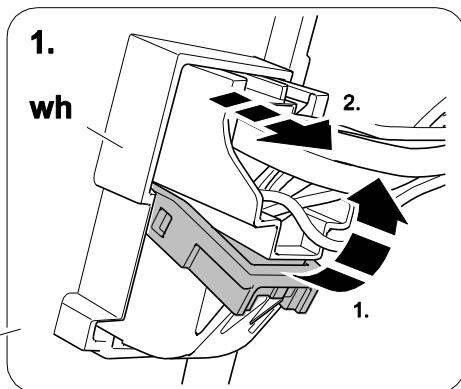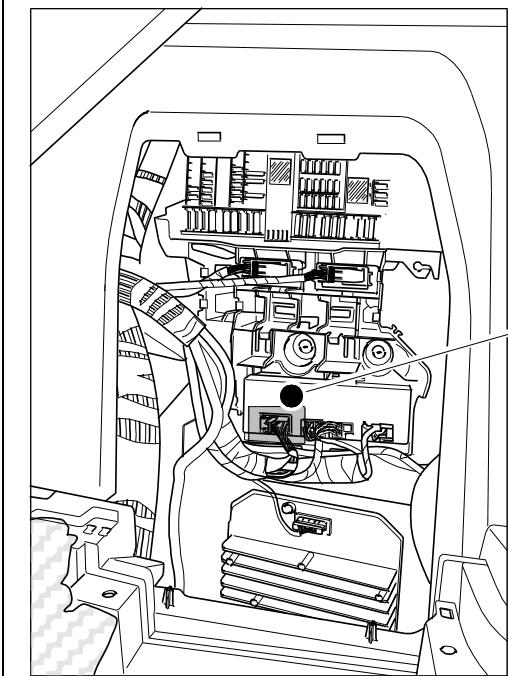

10




8

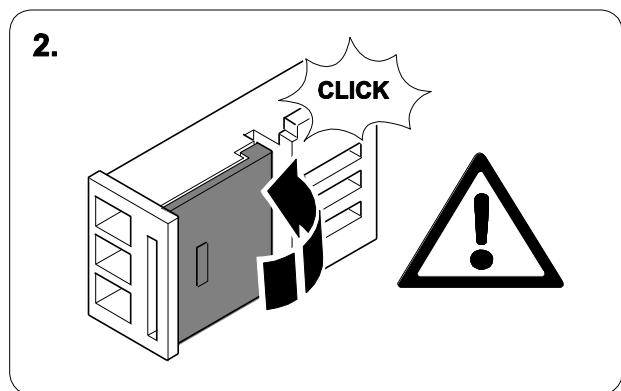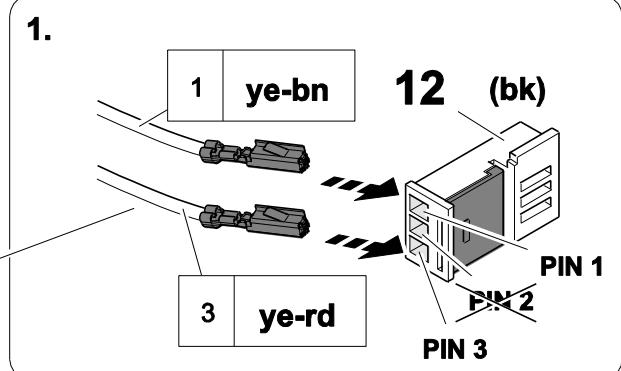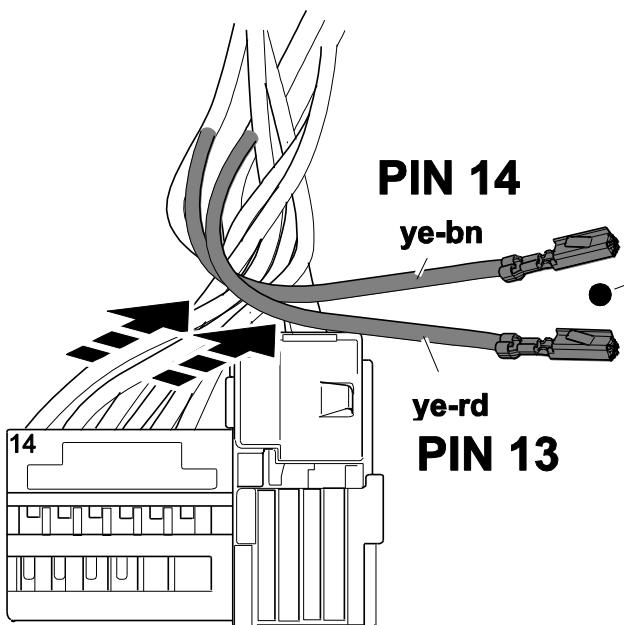


11




→ 8

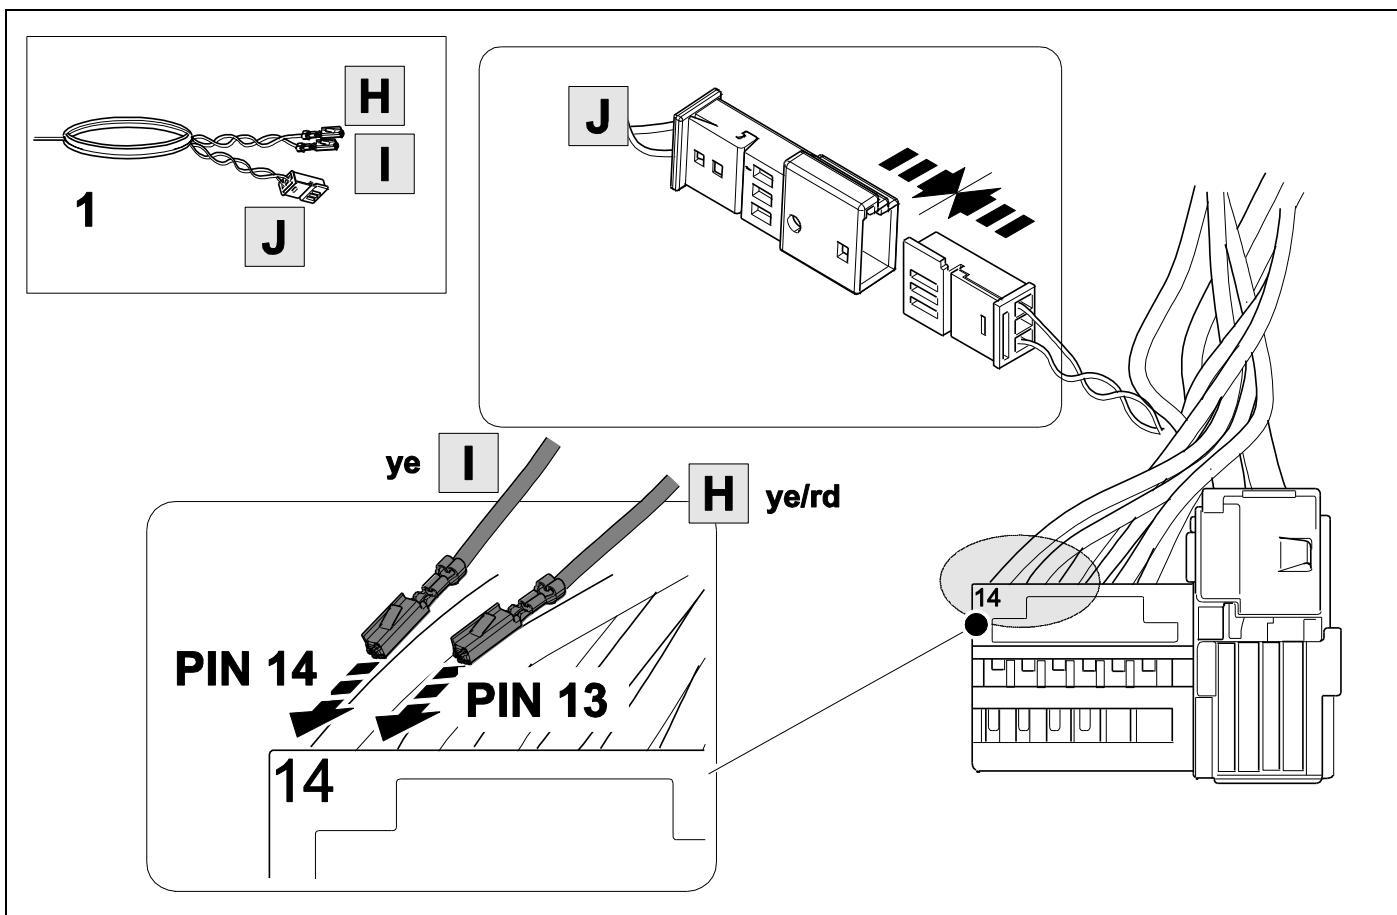




12

→ 8





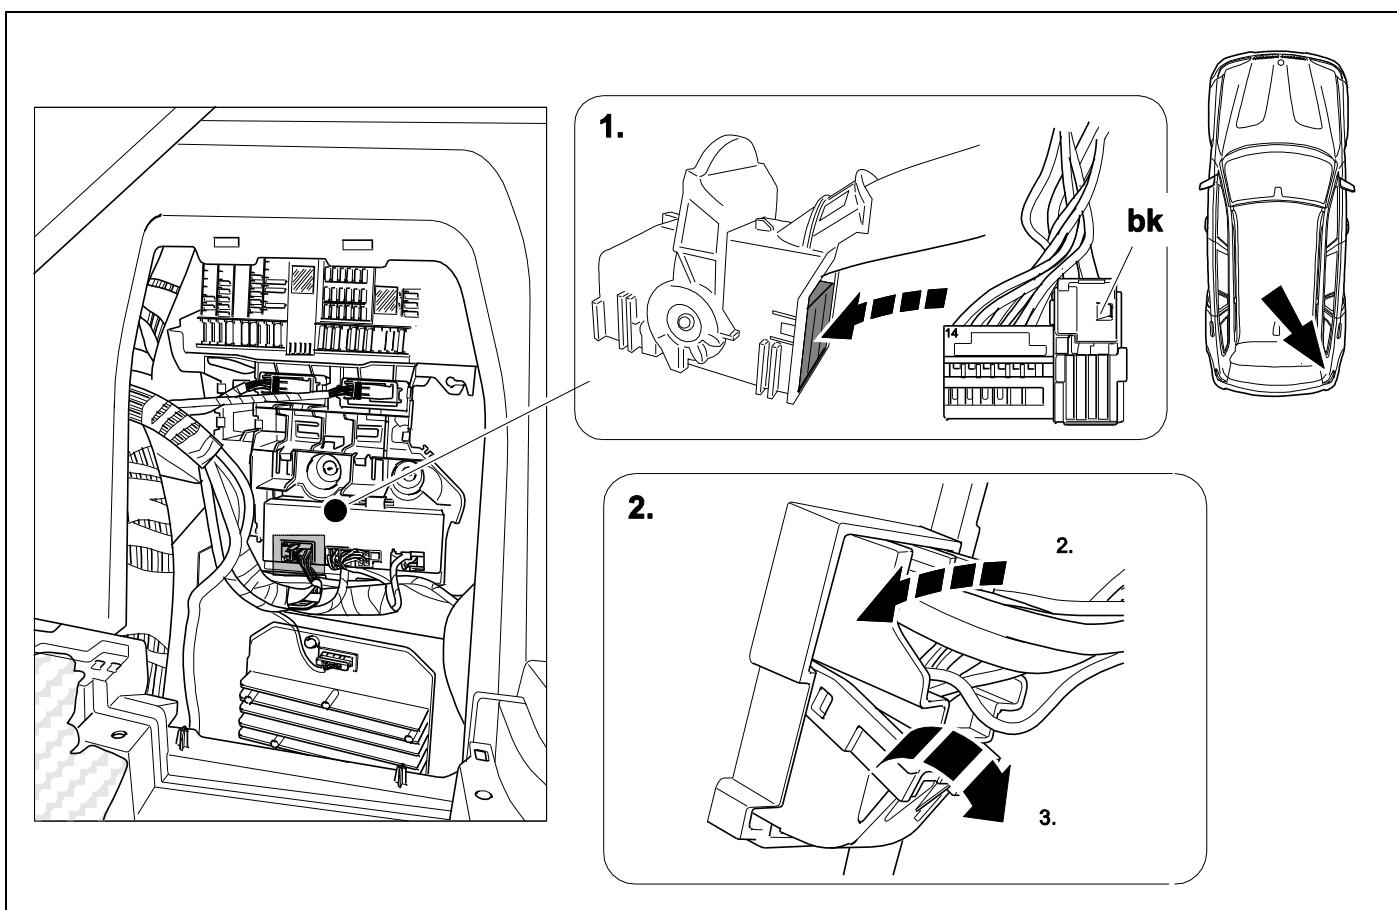


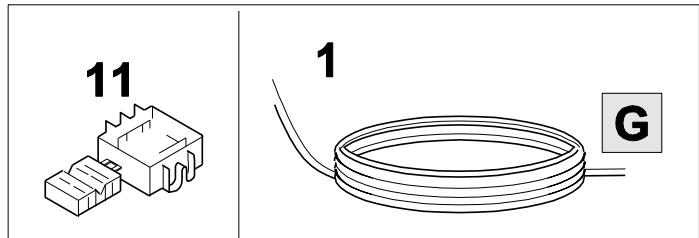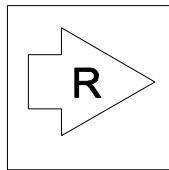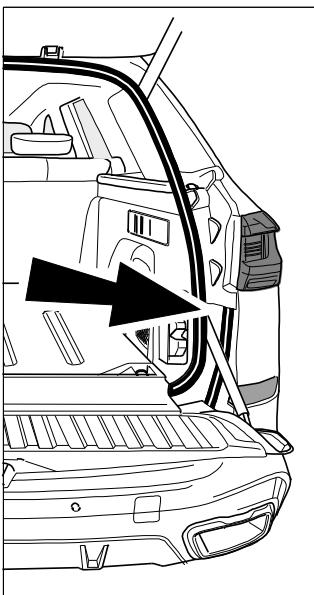bk-bu **G**




wh-rd

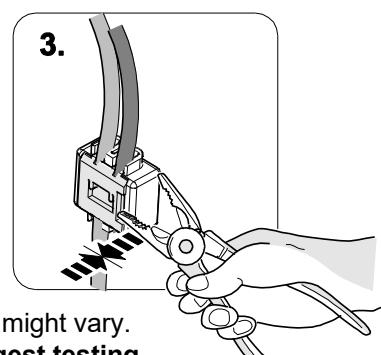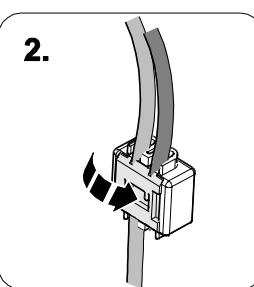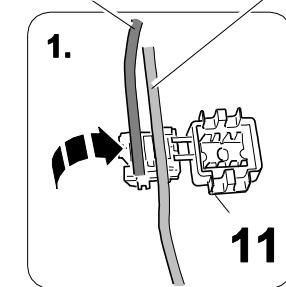




Use a tester to make sure you have connected the correct signals. Wire colours might vary. Incorrect connection might result in battery drain or improper light function. **Suggest testing light functions (Green Diagnostic LED on module) first before connecting to Stop and Indicator signals.** These two connections in step 13 and 14 are optional.

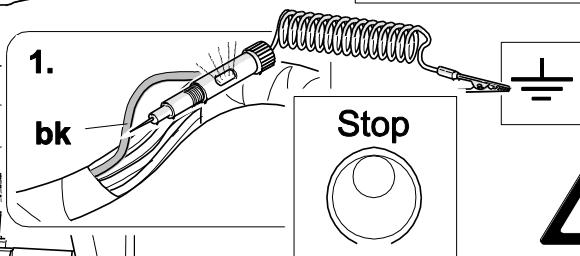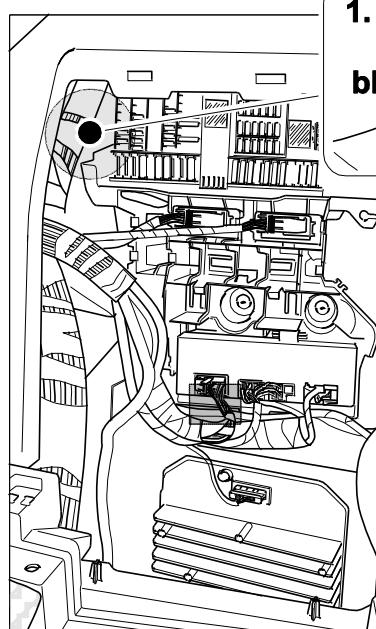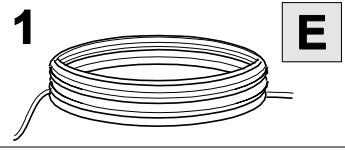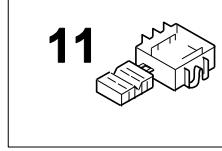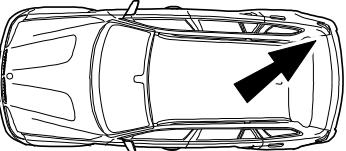




Third brake light

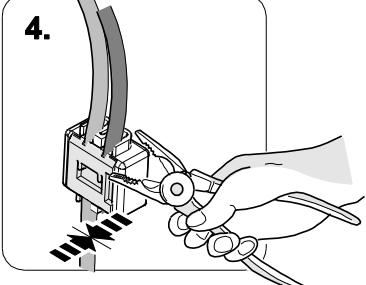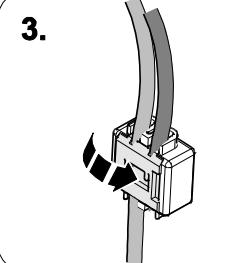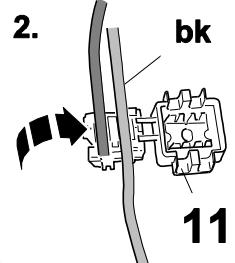bk-ye **E**

15

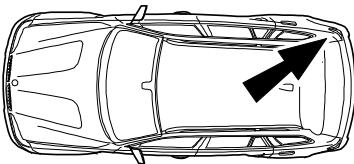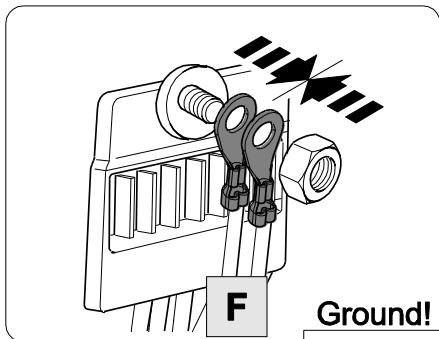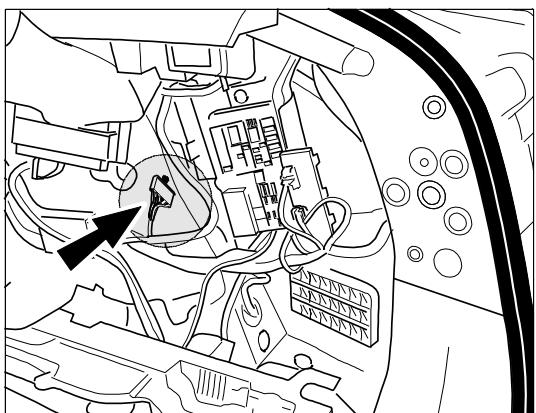




Ground!

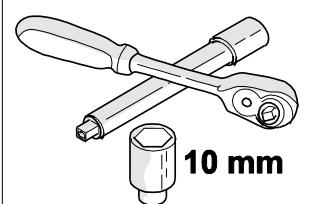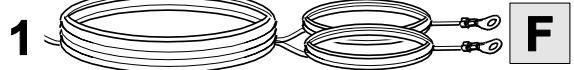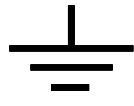







16








→ 21

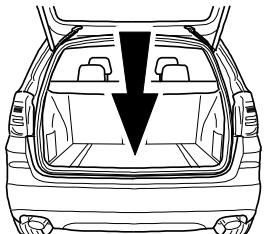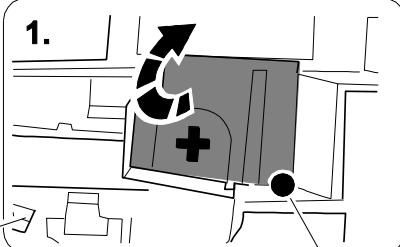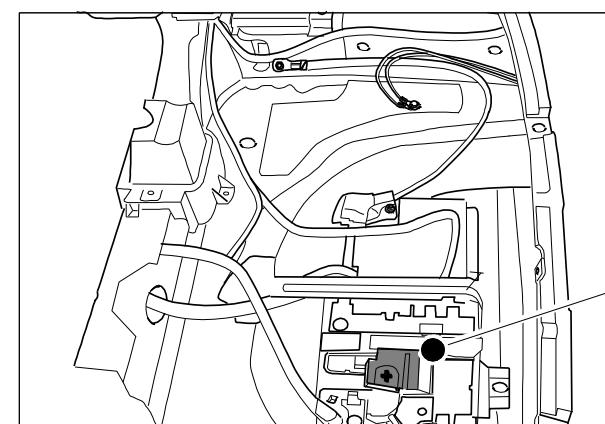


Hot all times!

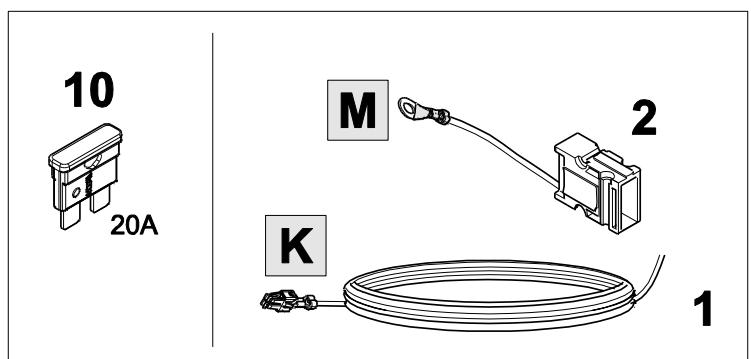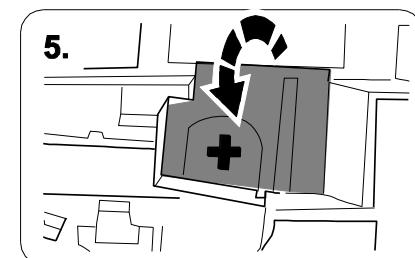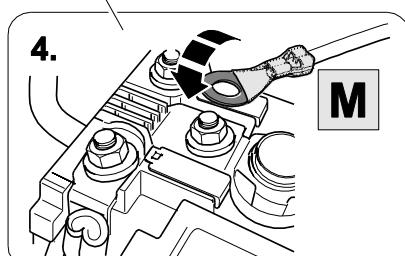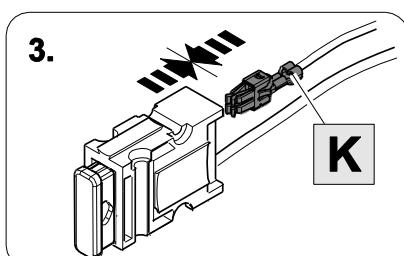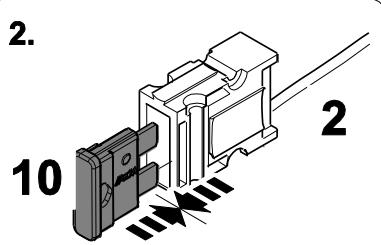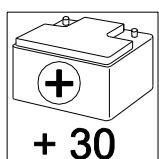

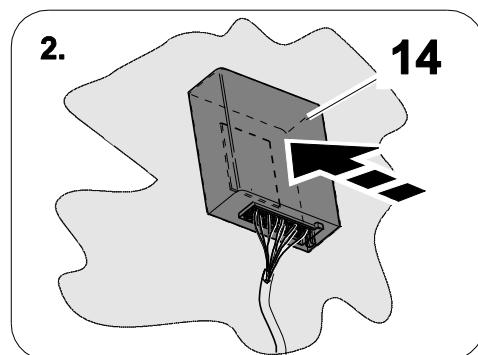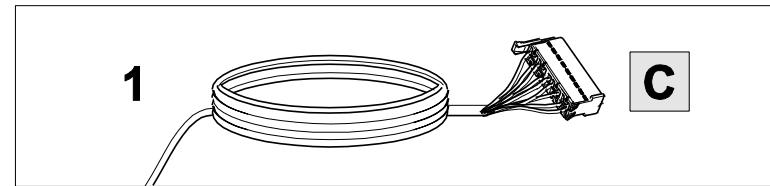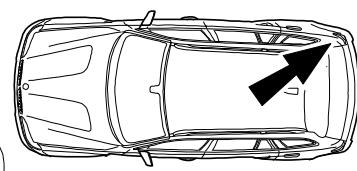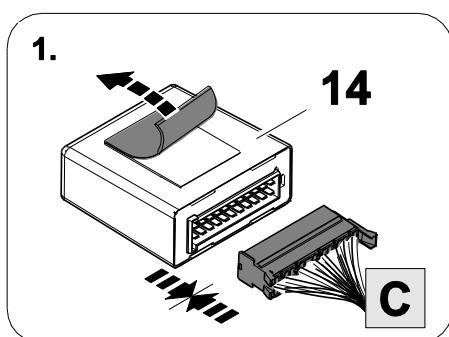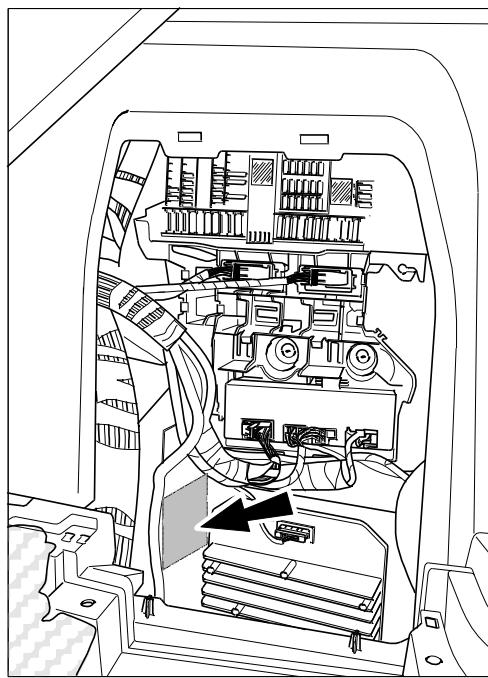





**BRAKE
CONTROLLER
PREPARED**

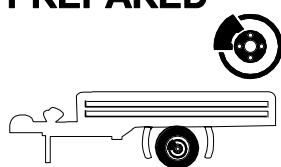


Trailer Brake Preparation

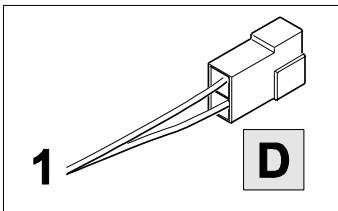


1.

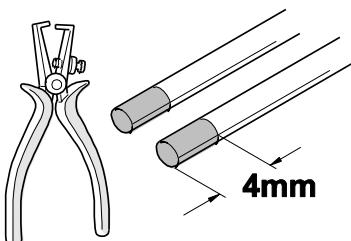


2.

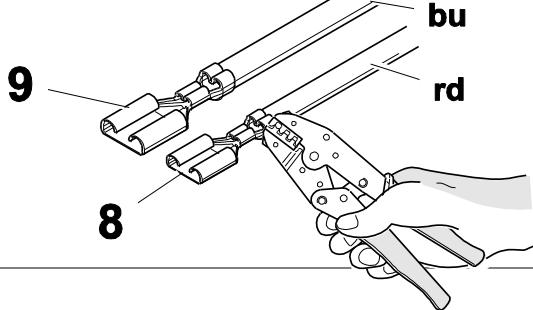

3.

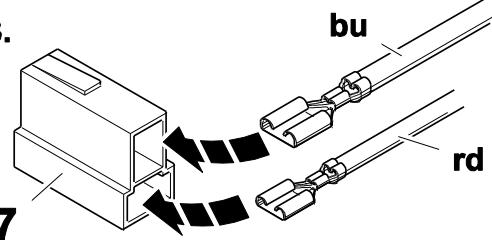




4.

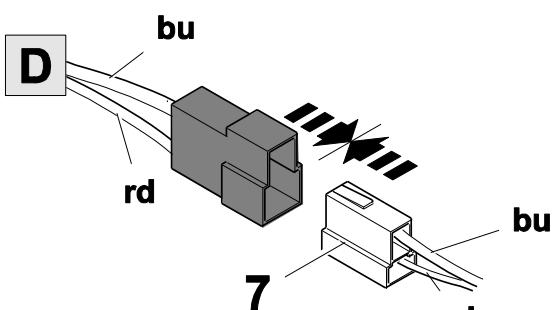

7




8

9

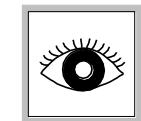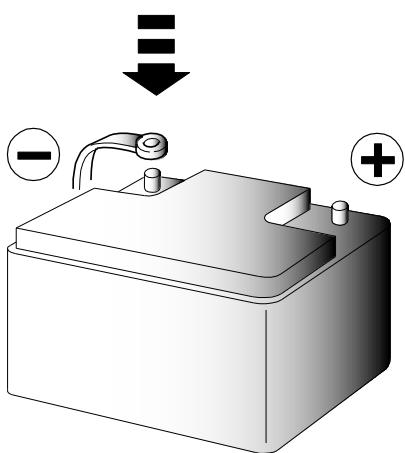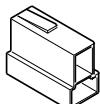


20

CHECK ALL LIGHTING FUNCTIONS

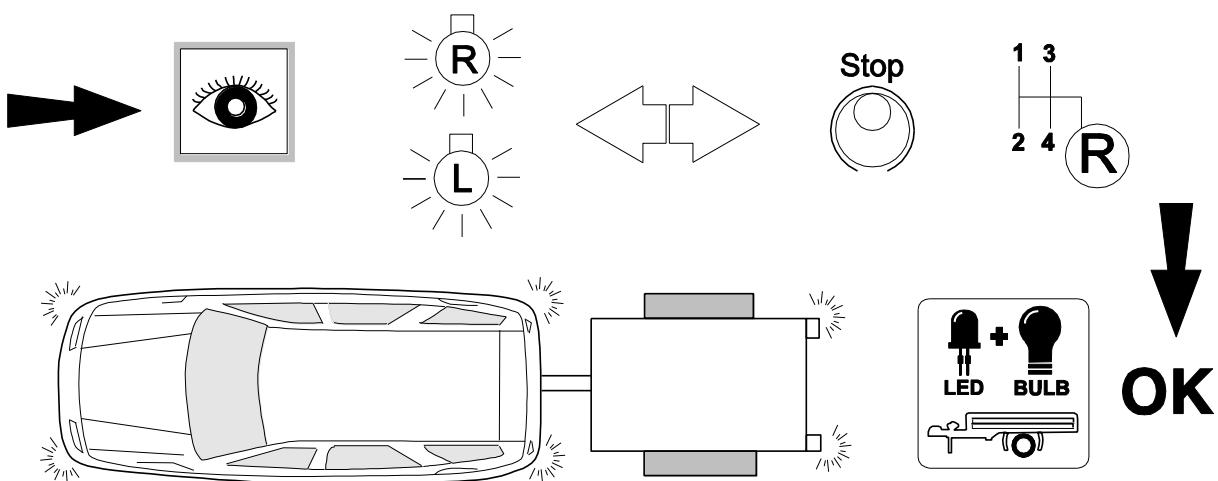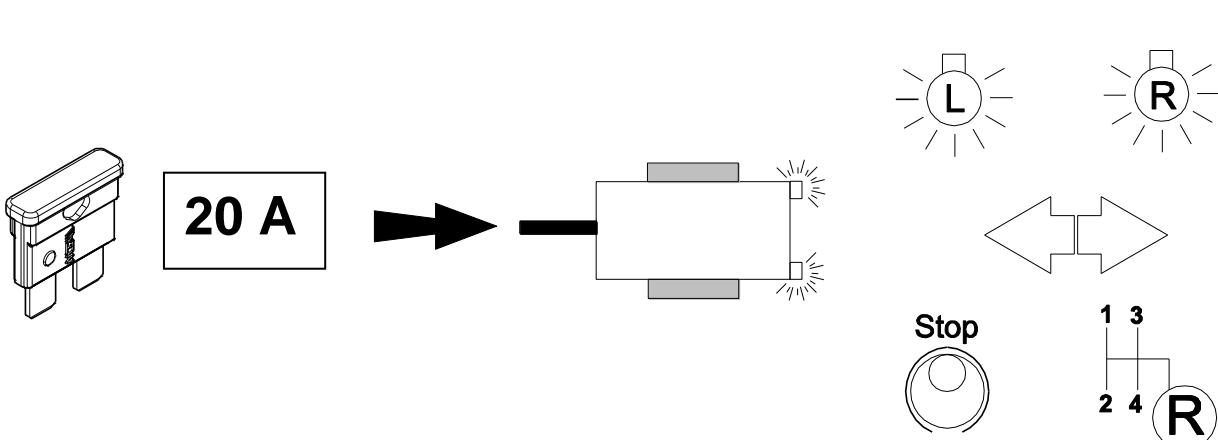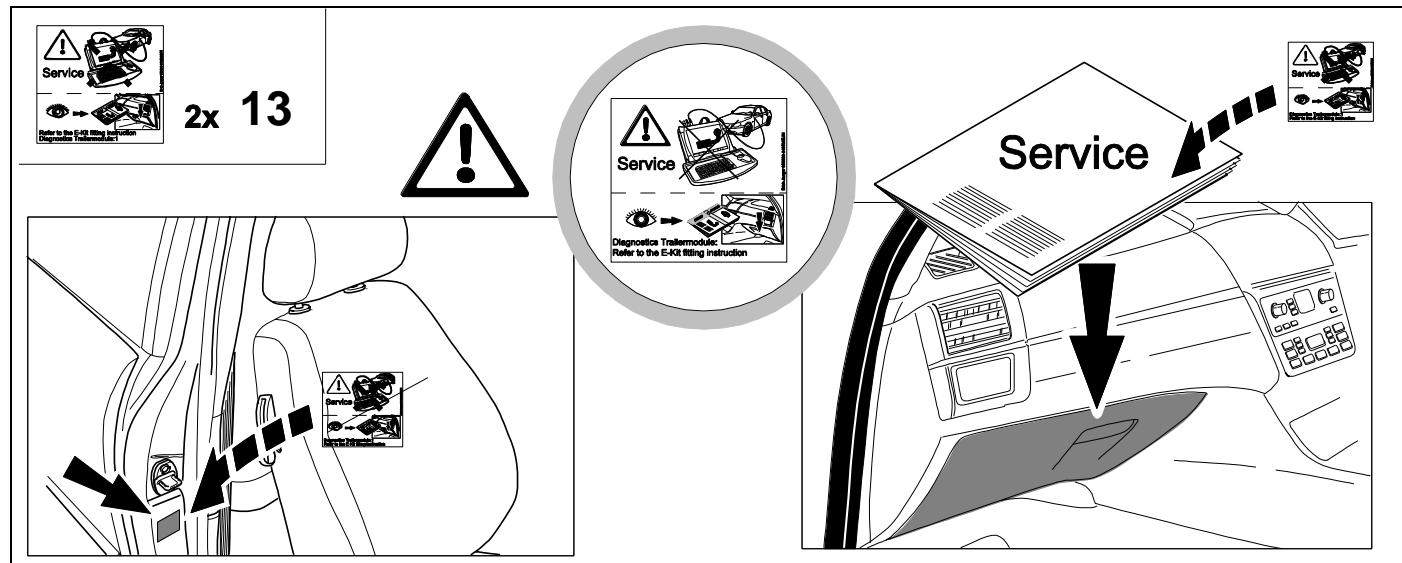**21****16****22**



23

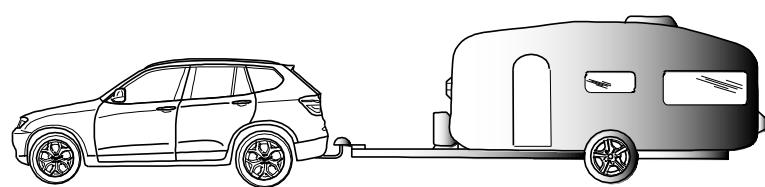

E-kit does not support assistance systems like:

- Trailer stability control**
- Park Pilot**
- Advanced stability control systems**

24

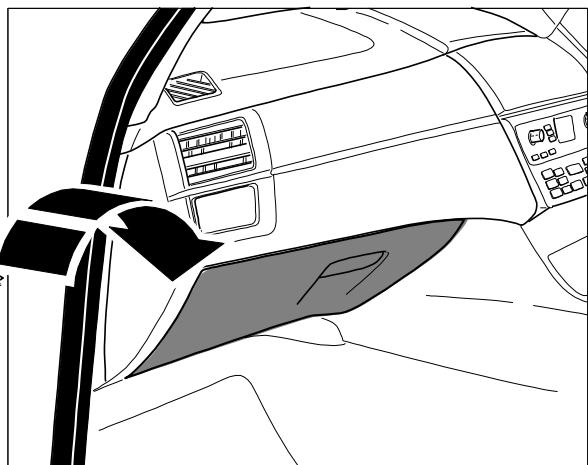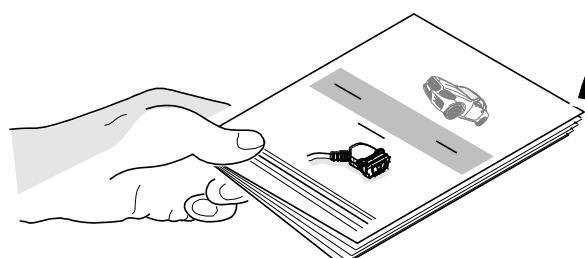


Subject to change in terms of construction, equipment and colour, and may contain errors.

The information and illustrations are non-binding.


Status LED for self-diagnosis

Operation Support

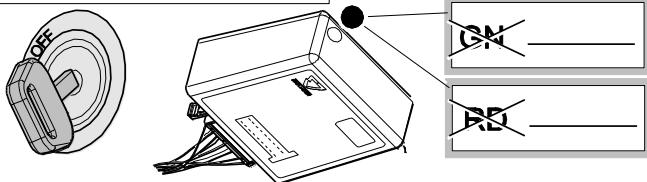


No CAN-Data =  Standby / Sleepmode

Ignition OFF

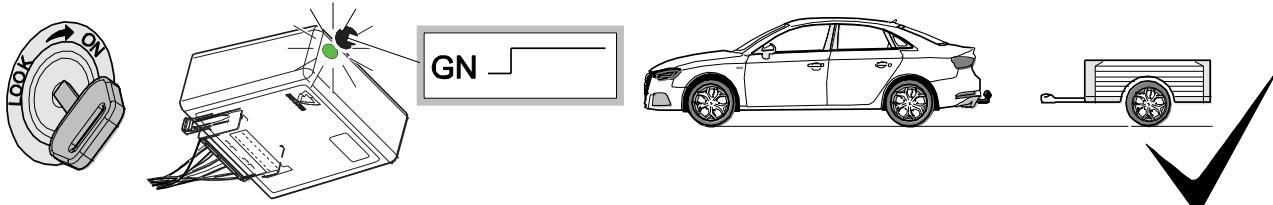


Ignition ON

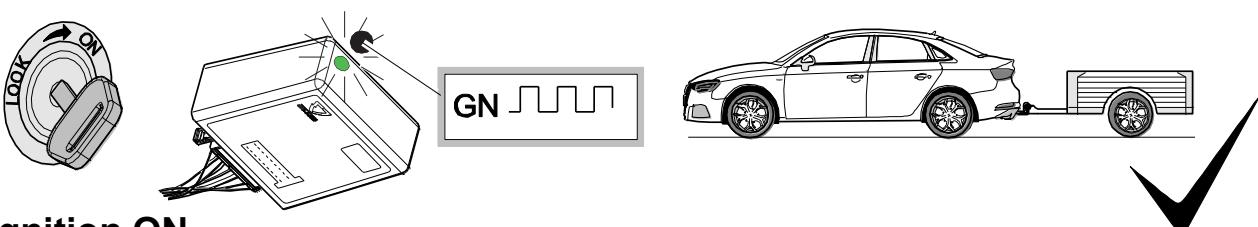

Ignition ON


Failure Support

CAN-Data Wire  → 1x max. 5 min.


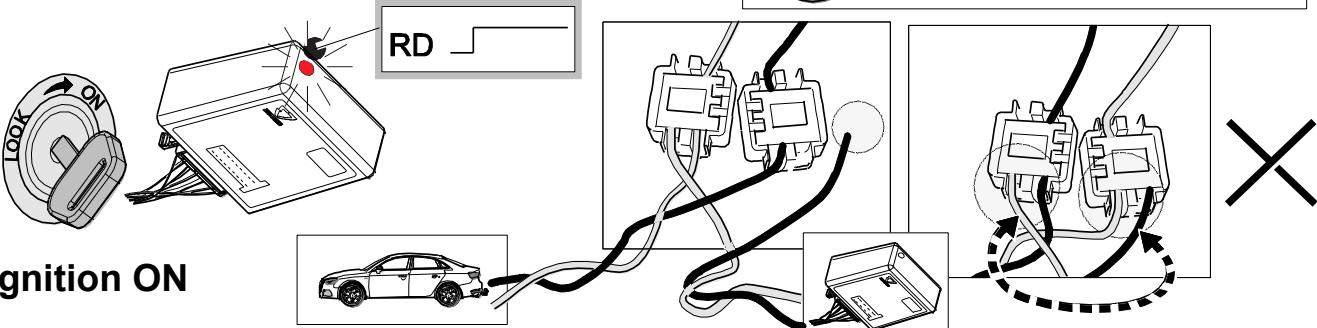


Ignition ON

Failure indicated by the module LED glowing red for a maximum of 5 minutes. If trailer connected the tail lights will also glow indicating failure of CAN signal.

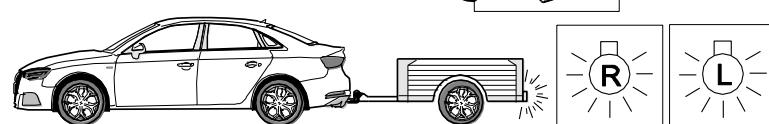

 PIN 17 or  PIN 1

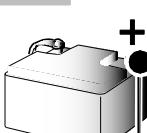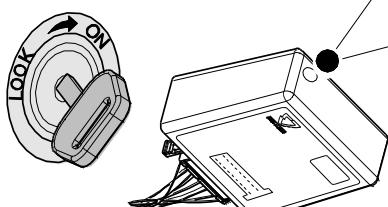

Ignition ON